XR-7192

SERVICE MANUAL

West Germany Model

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol ⧈ are trademarks of Dolby Laboratories Licensing Corporation.

Model Name Using Similar Mechanism	XR-7080/7082/7180
Tape Transport Mechanism Type	MG-55D-31

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION
14 watts per channel minimum continuous average power into 4 ohms, both channels driven, from 40 - 20,000 Hz with no more than 1% total harmonic distortion.

Power amplifier section

Outputs: Speaker outputs (sure seal connectors)
Speaker impedance: 3.2 - 8 ohms
Maximum power output:
27 W × 2 (at 4 ohms)*
9 W × 4 (at 4 ohms)*
*Measured at 14.4 V

Cassette player section

Tape track: 4-track 2-channel stereo
Frequency response: 30 - 18,000 Hz

Signal-to-noise ratio

Cassette type	Dolby B	Dolby C	Dolby off
TYPE II, IV	66 dB	76 dB	58 dB
TYPE I	63 dB	73 dB	55 dB

Wow and flutter: 0.1% (WRMS)

Tuner section

FM

Tuning range: 87.5 - 108.0 MHz
Antenna terminal: External antenna connector
Intermediate frequency: 10.7 MHz
Usable sensitivity: 12 dBf (75 ohms)
Selectivity: 75 dB at 400 kHz
Signal-to-noise ratio: 65 dB (stereo), 70 dB (mono)
Harmonic distortion at 1 kHz: 0.5% (stereo), 0.3% (mono)
Separation: 35 dB at 1 kHz
Frequency response: 30 - 15,000 Hz
Capture ratio: 2 dB

MW/SW

Tuning range: MW: 531 - 1,602 kHz
SW: 5,950 - 6,205 kHz
Antenna terminal: External antenna connector
Intermediate frequency: 450 kHz
Sensitivity: MW: 35μV
SW: 35μV

General

Output lead: Power antenna relay control lead
Power amplifier control lead
Tone controls: Bass ±10 dB at 100 Hz
Treble ±10 dB at 10 kHz
Loudness: +10 dB at 100 Hz
+6 dB at 10 kHz
Power requirements: 12 V DC car battery (negative ground)
Dimensions (without bracket): Approx. 178 × 50 × 153 mm (w/h/d) not incl. projecting parts and controls
Mounting dimensions: Approx. 182 × 53 × 145 mm (w/h/d) not incl. projecting parts and controls
Weight: Approx. 1.9 kg
Accessories supplied: Mounting hardware (1 set)

Design and specifications subject to change without notice.

FM/MW/SW CASSETTE CAR STEREO

SONY®

Features

Tuner section
- SSIR (Sony Super Interference Rejection) PLL Synthesizer tuner
- Automatic memory function stores a total of 24 stations in memory quickly and easily.
- Memory scan function scans preset stations each for five seconds in order.

Cassette deck section
- The auto-reverse function changes tape directions automatically.
- The C-type Dolby NR* system is incorporated as well as the B-type Dolby NR system.
- Intro play scans the beginning of each selection sequentially.
- The repeat play function enables a repeat play of the selection you are now listening to.
- The blank skip function automatically skips the blank portion longer than eight seconds and plays back the next selection.
- The ATA (Automatic Tuner Activation) function automatically turns on the tuner while fast-winding a tape.

CD section (when the optional Sony CD changer is connected)
- The intro play function plays the first ten seconds of each selection on every disc.
- The repeat play function enables a repeat play of the selection you are now listening to.
- The disc scan function plays the first ten seconds of the first selection on each disc.
- The shuffle play function plays selections in random order.
- The ATA function automatically turns on the tuner while changing discs.
- Manual search allows you to search for a desired point in a selection.

TABLE OF CONTENTS

Section	Title	Page
	Specifications	1
	Features	2
1.	**GENERAL**	
	Location and Function of Controls	3
	Installation	4
	Connections	6
	Tape Playback	8
	Automatic Tuning	9
	Manual Tuning	9
	Memory Preset Tuning	9
	Maintenance	10
2.	**DISASSEMBLY**	11
3.	**ADJUSTMENTS**	
3-1.	Mechsanical Adjustments	13
3-2.	Electrical Adjustments	13
	Deck Section	13
	Tuner Section	15
4.	**DIAGRAMS**	
4-1.	Tuner Unit Schematic Diagram	19
4-2.	IC501(μPD75516G) Functional Description	20
4-3.	Printed Wiring Boards	23
4-4.	Main Section Schematic Diagram	27
5.	**EXPLODED VIEWS**	31
6.	**ELECTRICAL PARTS LIST**	36
	Mounting Hardware	42

SECTION 1
GENERAL

Location and Function of Controls

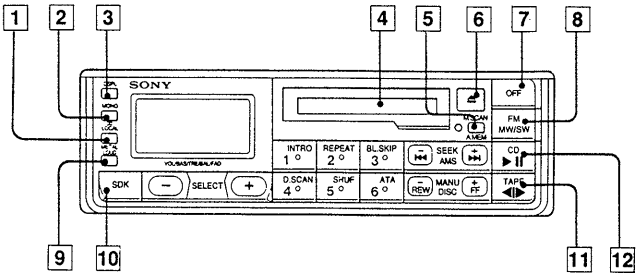

Refer to the page in ● for details.

	During radio reception	During tape playback
1	LOCAL button ⑨	METAL (metal/CrO_2) button ⑧
2	MONO (monaural) button ⑨	▯▯ button ⑧

3 **DSPL (display) button** ⑧

4 **Cassette insertion door**

5 **M.SCAN (memory scan)/A.MEM (automatic memory) button** ⑨ ⑩

6 **⏏ (eject) button**

7 **OFF (power off) button**

8 **FM/MW/SW (radio on/band select) button**

9 **LOUD (loudness) button**
Press to reinforce bass and treble especially when listening at low volume. To disengage the button, press it again.

10 **SDK button**

11 **TAPE ◀▮▶ (playback/transport direction change) button** ⑧

12 **CD ▶II (disc play/pause) button**

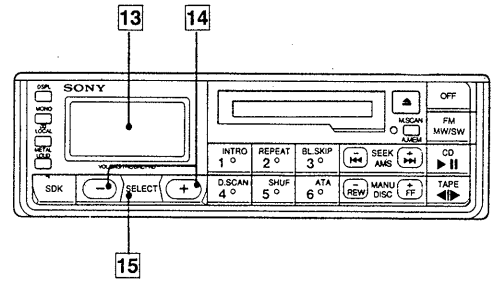

13 **Display window**

14 **(volume/bass/treble/balance/fader control) button**
button normally functions as the volume control. Adjust the level within three seconds after selecting the desired control mode. Otherwise, the mode goes back to the volume control mode.

15 **SELECT (control mode select) button**
Press to select the desired mode, BAS (bass), TRE (treble), BAL (balance), FAD (fader), or VOL (volume).

Display window	Control mode	Press −	Press +
BAS	Bass control	For less bass	For more bass
TRE	Treble control	For less treble	For more treble
BAL	Balance control	To decrease the right-speaker volume	To decrease the left-speaker volume
FAD	Fader control	To decrease the rear-speaker volume	To decrease the front-speaker volume
VOL	Volume control	For less volume	For more volume

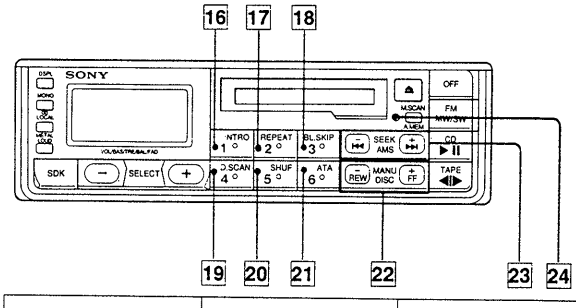

	During tape playback	During disc play	During radio reception
16	INTRO button ⑧		Preset number buttons ⑩
17	REPEAT button ⑧		
18	BL. SKIP (blank skip) button ⑧	—	
19	—	D.SCAN (disc scan) button	
20	—	SHUF (shuffle) button	
21	ATA (automatic tuner activation) button ⑧		
22	FF/REW (fast forward/rewind) button ⑧	DISC (disc change/manual search) button	MANU (manual tuning) button ⑨
23	AMS* button ⑧		SEEK (automatic tuning) button ⑨

24 **Reset button**
Press this button when you use this unit for the first time and when you have changed the car battery, or when other buttons do not function. The reset button is effective only when the unit is mounted in the bracket.

* Automatic Music Sensor

Note: The mute function, intro play, repeat play, disc scan, and shuffle play (1 and 2) will be cancelled when you press the OFF button or when you keep the ignition key set to the off position for more than eight seconds. The blank skip function and the automatic tuner activation will be maintained until you press each button again.

To change illumination colors

Press 1 while pressing the SELECT. Press these buttons again to restore the same color as before.

To mute a beep sound

Press 6 while pressing the SELECT. To obtain the beep sound again, press these buttons again.

Notes on the Power Select Switch

You can choose illumination mode with the power select switch located on the bottom.

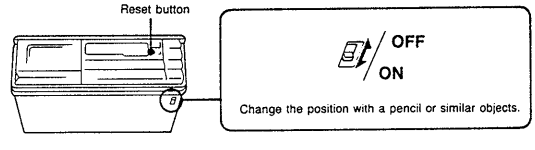

When you set the ignition key to the accessory position

Power select switch	ON	OFF
Illuminate where?	OFF, TAPE, FM/MW/SW, CD, ⏏ buttons and the cassette insertion door	No illumination

- When you activate the unit, all parts of the panel illuminate, regardless of the position of the switch.
- If your car has no accessory position, we recommend you to set the switch to the OFF position.
- Be sure to press the reset button after changing the position of the switch.

Installation/ Installation

Precautions

- Choose the mounting location carefully so that the unit will not interfere with the normal driving functions of the driver.
- Avoid installing the unit where it should be subject to high temperatures, such as from direct sunlight or from hot air from the heater, or where it would be subject to dust, dirt or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.

Zur besonderen Beachtung

- Wählen Sie den Einbauort so aus, daß der Fahrer nicht behindert wird.
- Bauen Sie das Gerät nicht an Stellen ein, an denen es hohen Temperaturen (pralles Sonnenlicht, Wärme von der Heizung), Staub, Schmutz oder starken Vibrationen ausgesetzt ist.
- Verwenden Sie für einen sicheren Einbau nur die mitgelieferten Montageteile

To Remove the Unit
Zum Herausnehmen des Geräts

When installed with the carrying handle
Wenn das Gerät mit Griff installiert ist

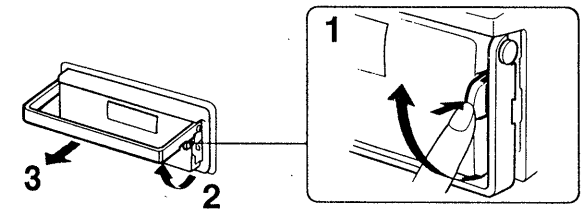

To prevent the unit from being stolen
When you leave your car, remove the unit from the bracket and take it away with you.

Zum Diebstahlschutz
Nehmen Sie beim Verlassen des Fahrzeugs das Gerät aus der Halterung heraus.

When installed without the carrying handle
Wenn das Gerät ohne Griff installiert ist

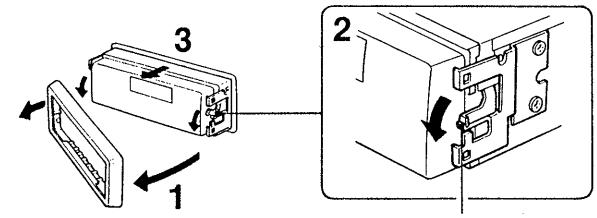

Press down the silver part slightly not to break the part.
Den silbernen Teil leicht nach unten drücken. Darauf achten, daß nichts abbricht.

1 Remove the unit from the bracket.
Nehmen Sie das Gerät aus der Halterung heraus.

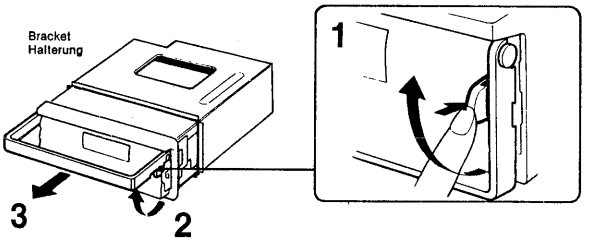

2 Install the bracket in the dashboard.
Setzen Sie die Halterung in das Armaturenbrett ein.

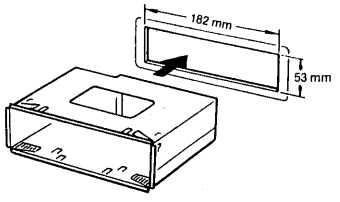

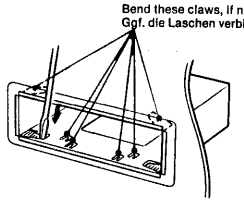

Example 1
Beispiel 1

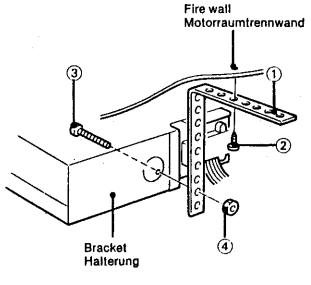

Example 2
Beispiel 2

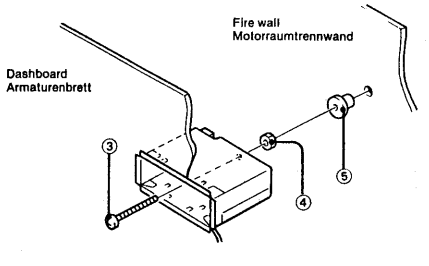

3A When installing the unit with the carrying handle
Einsetzen des Geräts mit angebrachtem Griff

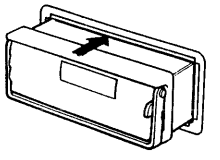

Push in the unit until it is locked firmly.
Das Gerät hineindrücken, bis es sicher einrastet.

3B When installing the unit without the carrying handle
Einbau des Geräts ohne Griff

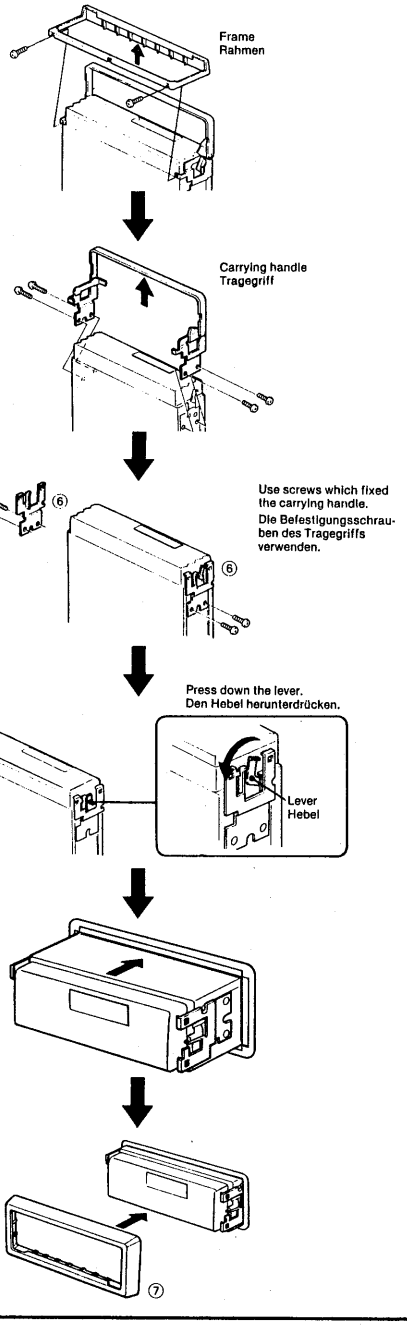

Connections/Anschluß

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the **red** power input lead only after all other leads are connected. And be sure to connect it to the positive 12 V power terminal. It will be energized when the ignition key is set to the accessory position.
- **Run all ground wires to a common ground point.**

Zur besonderen Beachtung

- Das Gerät ist für den Betrieb an einer 12-V-Autobatterie mit negativer Erdung ausgelegt.
- Trennen Sie vor dem Anschließen des Geräts das Erdungskabel der Autobatterie ab, um einem Kurzschluß vorzubeugen.
- Schließen Sie die **rote** Stromversorgungsleitung als letztes (nachdem alle anderen Anschlüsse hergestellt sind) an einen positiven 12-V-Kontakt des Bordnetzes an, der in der Zubehörposition des Zündschlüssels unter Strom steht.
- **Leiten Sie alle Erdungskabel an einen gemeinsamen Massepunkt.**

System Connection / Anschluß weiterer Geräte

With a CD changer
CD-Wechsler

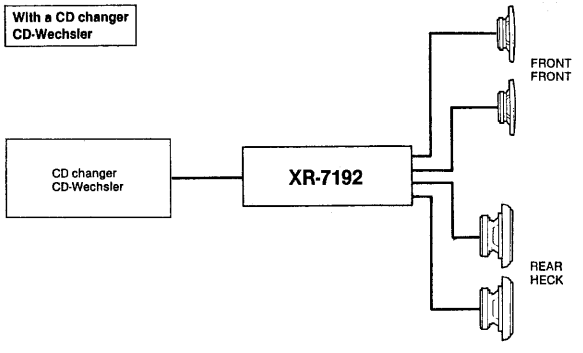

With a power amplifier
Endverstärker

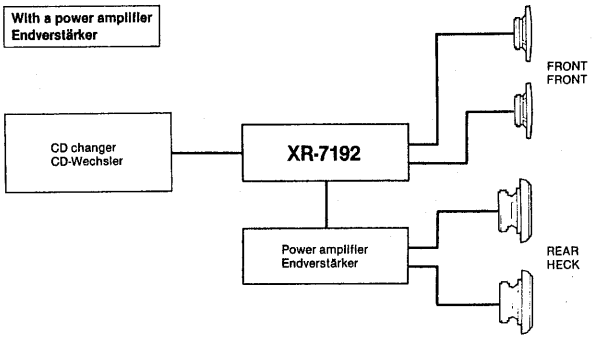

Speaker Connection / Anschluß der Lautsprecher

For 4-speaker connection
4-Lautsprecher-System

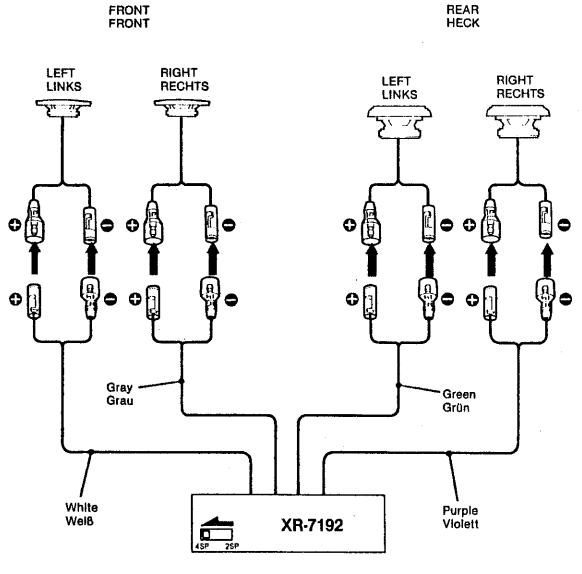

Be sure to change the selector to 4 SP.
Der Wähler muß auf 4 SP umgeschaltet werden.

For 2-speaker connection
2-Lautsprecher-System

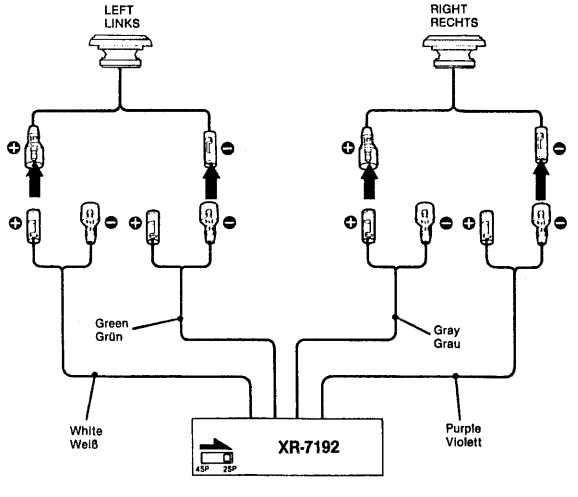

Be sure to change the selector to 2 SP.
Der Wähler muß auf 2 SP umgeschaltet werden.

Notes on speaker connection
- Use speakers with an impedance of 3.2 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.
- Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.
- Do not attempt to connect the speakers in parallel.

Hinweise zum Lautsprecheranschluß
- Verwenden Sie nur Lautsprecher, die eine Impedanz von 3,2 bis 8 Ohm und ausreichende Belastbarkeit aufweisen, um Beschädigungen zu vermeiden.
- Verbinden Sie die Lautsprecherleitungen nicht mit dem Wagenchassis und verbinden Sie auch nicht die Anschlüsse des linken mit denen des rechten Lautsprechers.
- Schließen Sie die Lautsprecher nicht parallel an.

Connection Diagram / Anschlußdiagramm

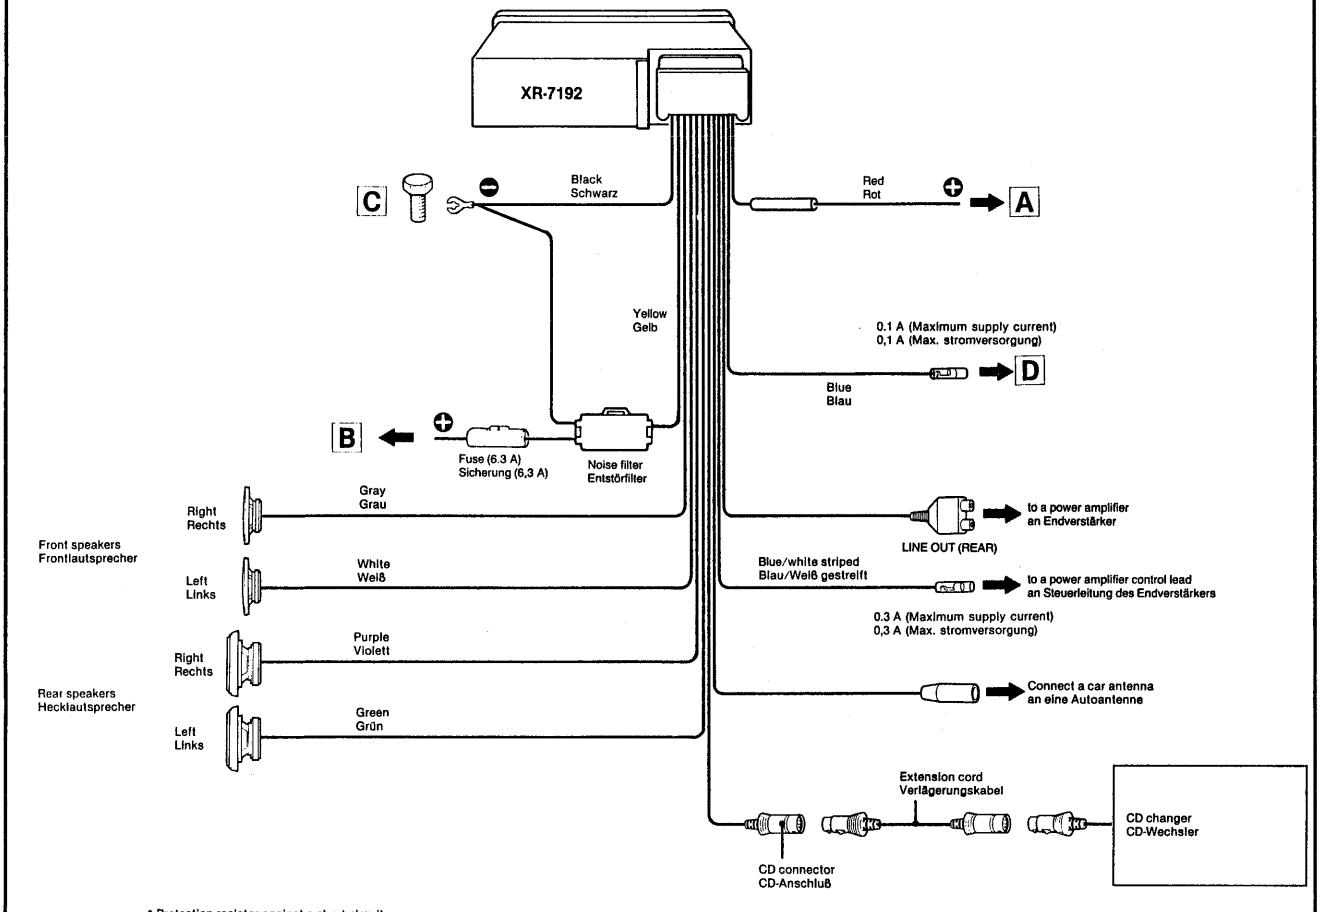

A to the + 12 V power terminal which is energized in the accessory position of the ignition key

B to the + 12 V power terminal which is energized at all times

C to a metal part of the car

D to power antenna relay control box

Notes on the control leads

- The power antenna control lead (blue) supplies + 12 V DC when you turn on the tuner or the ATA* function is activated. A power antenna without relay box cannot be used with this unit. For details about the power antenna, refer to the power antenna instruction manual.
- When the power antenna control lead or the power amplifier control lead is in contact with a metal part of the car, the unit cannot be turned on because the protection circuit is activated.

* Automatic Tuner Activation

After completing the connections and mounting the unit into the bracket, press the reset buttonof this unit. The reset button is effective only when the unit is mounted in the bracket.

Note on the power select switch

You can change illumination mode with the power select switch located on the bottom of the unit. The switch is factory-set to the ON position.
If your car has no accessory position, set the switch to the OFF position with a pencil or similar objects. After changing position of the power select switch and mounting the unit into the bracket, be sure to press the reset button. For details about the illumination mode, refer to the operating instructions (page 3).

A An einen + 12 V Kontakt des Bordnetzes, der in der Zubehörposition des Zündschlüssels unter Strom steht.

B An einen + 12 V Kontakt, der immer unter Strom steht

C An ein Metallteil des Wagens

D An die Motorantennen-Relaisbox

Hinweise zu den Steuerleitungen

- Die blaue Motorantennen-Steuerleitung liefert + 12 V Gleichspannung, wenn der Tuner eingeschaltet oder ATA*-Funktion aktiviert ist. Die anzuschließende Motorantenne muß mit einem Relais ausgestattet sein. Genaueres zum Anschluß der Motorantenne siehe die bei ihr mitgelieferte Anleitung.
- Wenn die Motorantennen-Steuerleitung oder die Endverstärker-Steuerleitung mit einem Metallteil des Wagens in Berührung steht, behindert eine Schutzschaltung das Einschalten des Gerätes.

* Automatic Tuner Activation

Nach dem Anschluß und dem Einbau in die Halterung muß die Rücksetztaste des Gerätes gedrückt werden. Diese Taste arbeitet nur, wenn das Gerät in die Halterung eingebaut ist.

Hinweis zum Wahlschalter

Mit dem an der Unterseite des Gerätes befindlichen Wahlschalter kann die Beleuchtungsart geändert werden. Der Schalter steht werksseitig in der Position ON.
Wenn das Zündschloß Ihres Wagens keine Zubehörposition (ACC) besitzt, stellen Sie den Schalter unter Verwendung eines Bleistifts o.ä. auf OFF. Nach der Umstellung des Wahlschalters und dem Einbau des Gerätes in die Halterung darf nicht vergessen werden, die Rücksetztaste zu drücken. Genaueres zur Beleuchtungsart kann der Bedienungsanleitung (Seite 3) entnommen werden.

Tape Playback

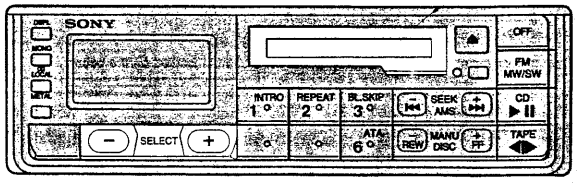

1

Insert a cassette to start playback.

or

TAPE

Press TAPE when a cassette is already inserted.

2 SELECT

Press to adjust the volume.

Other Operations

To rewind or fast-forward the tape (REW (rewind) / MANU DISC / FF (fast-forward))	**To stop the tape and listen to the radio** (FM MW/SW)
To listen to the other side of the cassette (TAPE)	**To play back the tape again** (TAPE)
To take out the cassette (⏏)	**To stop the tape and turn off the unit** (OFF)
	To stop the tape and listen to a disc (CD ▶II)

Side of the cassette being played back
This unit plays back both sides of the cassette repeatedly. The indicator in the display window shows which side of the cassette is being played back.

Indicator	Side
▶	The side facing upward
◁	The side facing downward

Listening to the CrO_2 (TYPE II) or Metal (TYPE IV) Tapes

Press LOCAL / METAL

MTL appears in the display window.
To listen to the normal (TYPE I) tapes, press it again.

Listening to Dolby NR-processed Tapes

Press MONO / DOLBY NR

Press to activate the B-type or C-type Dolby NR system.
Select the same Dolby NR system used for the recorded cassette.
The Dolby NR (Noise Reduction) system reduces tape hiss noise in low-level, high-frequency signals.

Listening to the First Portions of Selections in Order (Intro play)

Press INTRO 1 (during tape playback)

The first ten seconds of each selection will be played back in order from the next selection. Press again to release this function.

Repeating the Selection Being Played (Repeat play)

Press REPEAT 2

The unit goes back to the beginning of the selection when the selection ends. Press again to release this function.

Skipping the Long Blank (Blank skip function)

Press BL.SKIP 3

The unit skips the long blank (more than eight seconds) automatically and plays back the next selection. Press again to release this function.

To display the tape running indicator
Press DSPL. The running indicator appears in the display window. To restore the normal indication, press it again.





Locating the Beginning of a Desired Selection During Playback (AMS function)

During tape playback

Press ⏮ or ⏭ as many times as the number of selections you want to skip. Up to 9 selections can be skipped.

To locate a selection ahead	Press ⏭.
To locate a previous selection	Press ⏮.



The number in the display window shows how many selections will be skipped.

Examples

• When you want to listen to the third selection ahead from the current selection

Press ⏭ three times.



• To locate the beginning of the current selection

Press ⏮ once.



To Turn on the Radio Automatically While Fast-winding the Tape (ATA function)

Press ATA 6

The tuner turns on automatically when you press the REW or FF during tape playback. When you resume the tape playback, the tuner turns off automatically.

To display the frequency indication while the ATA is operating
Press DSPL. The display window shows the frequency which you tuned in last time. In this case, all the tuner operation buttons function in the same way as when you turn on the tuner (except for the FM/MW/SW button).

Automatic Tuning

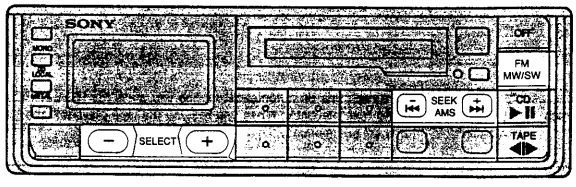

1 FM MW/SW

Press to select a desired band, FM1, FM2, FM3, MW or SW.

The tuner turns on at the same time.

2 SEEK AMS

Press to start scanning.

For lower frequencies

For higher frequencies

The scanning automatically stops when a station is tuned in.

Repeat this step until the desired station is tuned in.

3 SELECT

Press to adjust the volume.

FM has three bands (FM1, FM2, FM3). Three bands cover the same frequency range. To change the band, press FM MW/SW button.

Other Operations

To stop the radio and start tape playback

When no cassette is inserted	
When a cassette is already inserted	TAPE

To stop the radio and turn off the unit	OFF
To stop the radio and listen to a disc	CD

When there are too many stations and the scanning stops too frequently during automatic tuning

Press LOCAL / METAL

Only the stations with relatively strong signals can be tuned in.



When the FM stereo program is too weak and noisy

Press MONO / DD

The noise will be reduced. The sound will be monaural instead.



When the FM stereo program of sufficient signal strength is tuned in



The program is automatically received in stereo.

Manual Tuning

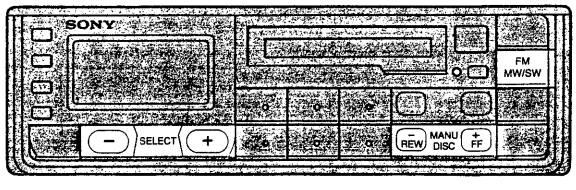

1 FM MW/SW

Press to select a desired band, FM1, FM2, FM3, MW or SW.

The tuner turns on at the same time.

2 REW MANU DISC FF

Press to select a desired station.

REW For lower frequencies

FF For higher frequencies

To change the frequency rapidly, keep the button pressed.

3 SELECT

Press to adjust the volume.

Warning
While driving, keep your eyes on the road and use the automatic tuning or the memory preset tuning!

Memory Preset Tuning

The unit can memorize a total of 24 stations, one on each preset button. (6 stations each for FM1, FM2, FM3, and 6 stations in total for MW and SW).

Memorizing the Stations Automatically (Automatic memory function)

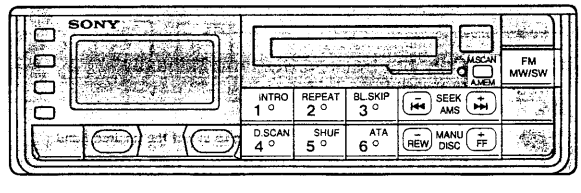

1 FM MW/SW

Press to select a desired band, FM1, FM2, FM3, MW or SW.

The tuner turns on at same time.

2 M.SCAN / A.MEM

Press for more than two seconds.

The unit starts scanning the selected band and memorizes the tuned stations on the preset number button 1 through 6 automatically.

In what way are stations scanned and memorized?
The unit scans the selected band twice. The scanning starts from the displayed frequency. During the first cycle, the unit scans stations with considerably strong signals. During the next cycle, the unit scans stations that can be received, including weak ones. And for memorizing, if any preset number is indicated in the display window, memorizing starts from this preset number. When you choose FM2 and the preset number 3 is displayed in the window, for example, memorizing starts from the preset number 3 on FM2, and stops at the preset number 6 on FM 3.

Memory Preset Tuning

Surveying What is Being Broadcast on the Preset Stations

Press M. SCAN / A. MEM lightly. Each memorized station will be scanned for five seconds in order. (When the broadcast of the memorized station is too weak, it cannot be received.)

Memorizing Only the Desired Stations Manually

Example: To memorize on the preset number 1

1. FM MW/SW — **Press to select the desired band.**
2. SEEK AMS (−) (+) or MANU DISC REW (−) FF (+) — **Press to tune in the desired station.**
3. INTRO 1 ° — **Press for more than two seconds.**



The number of the pressed preset number button will be displayed. MEM indicator appears to show that the station has been memorized. (MEM indicator will disappear in a few seconds.)

Repeat these steps for each preset button.

To Receive the Preset Station

1. FM MW/SW — **Press to select the desired band.**
2. INTRO 1 ° ~ ATA 6 ° — **Press lightly to receive the desired station.**

Important
Every preset number button has only one memory for a band. The previously memorized station will be erased when you enter a new station of the same band on the same preset number button.

Maintenance

Fuse Replacement

If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In this case, consult your nearest Sony dealer.

Warning
Use the specified ampere fuse.
Use of a higher amperage fuse may cause serious damage.

Cleaning the Connector

To keep the best possible sound quality, clean the metallic part of the connector at the rear of the unit periodically using a commercially available head cleaning fluid or rubbing alcohol and a cotton swab.

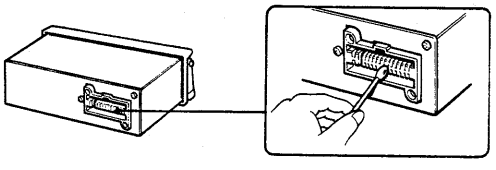

Cleaning the Head and the Tape Path

Prolonged use may contaminate the tape head and the tape path. Contamination causes sound drop-outs in playback. Clean the tape head and the tape path every two weeks to enjoy optimum hi-fi stereo sound. Use a commercially available cleaning cassette.

SECTION 2
DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

UPPER COVER

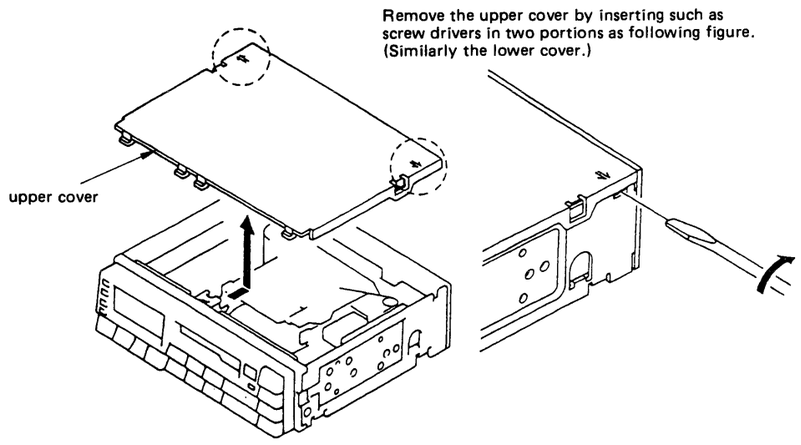
Remove the upper cover by inserting such as screw drivers in two portions as following figure. (Similarly the lower cover.)
upper cover

HANDLE

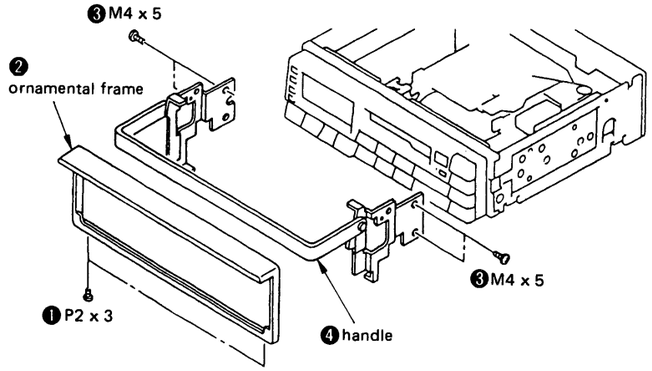

FRONT PANEL ASSEMBLY

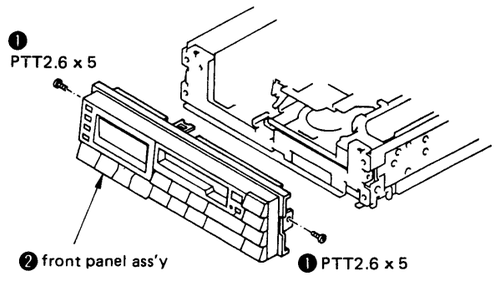

BACK PANEL

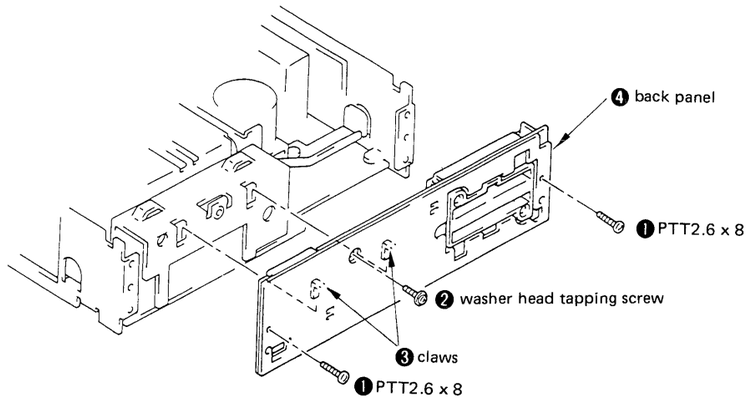

MD BLOCK

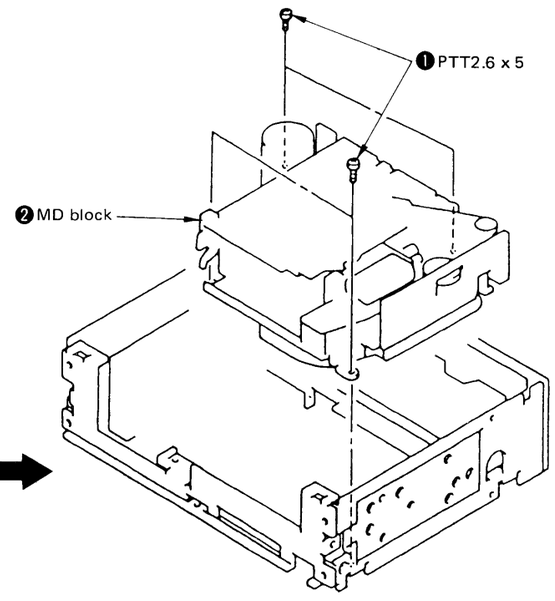

SECTION 3
ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENT

PRECAUTION

1. Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment:
   PB head — Pinch roller
   Idler — Rubber belt
   Capstan
2. Demagnetize the PB head using a head demagnetizer.
3. Be careful not to use a magnetized screwdriver.
4. After adjustment is completed, lock the adjustment parts using screws.
5. Unless otherwise specified, make adjustments at the specified voltage (14.4 V).

Torque Measurement

Before measuring torque, set to the test mode 2.

Setting Procedure:

1. While pressing "SDK" (S724) and "2" (S712) buttons simultaneously, press "RESET" (S740) button.
2. Test mode releasing procedure after measuring is pressing "OFF" (S734) or "RESET" (S740) buttons.

LCD display pattern duning playback on the test mode 2.

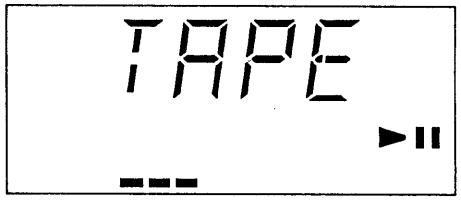

Measure the torque at a supply voltage of 14.4 V DC.

	Torque meter	Meter reading
FWD	CQ-102C	25 to 55 g·cm (0.35 to 0.77 oz·inch)
FF, REW	CQ-210B	55 to 150 g·cm (0.77 to 2.1 oz·inch)
Back tension	CQ-102C	1.5 to 4 g·cm or less (0.02 to 0.05 oz·inch or less)

Adjustment Location:

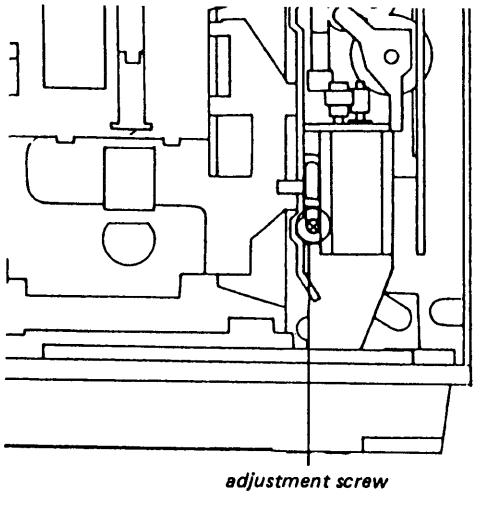

3-2. ELECTRICAL ADJUSTMENTS DECK SECTION

PB Head Vertical Adjustment

Proceudre:

1. Put the set into the FWD PB mode.

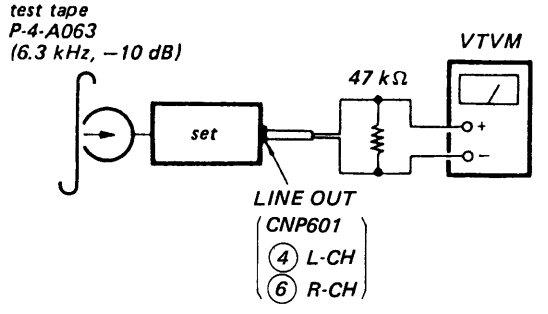

2. Turn the screw and check the output peak value. Adjust the screw so that the peak value in channels L and R coincides within 3 dB.

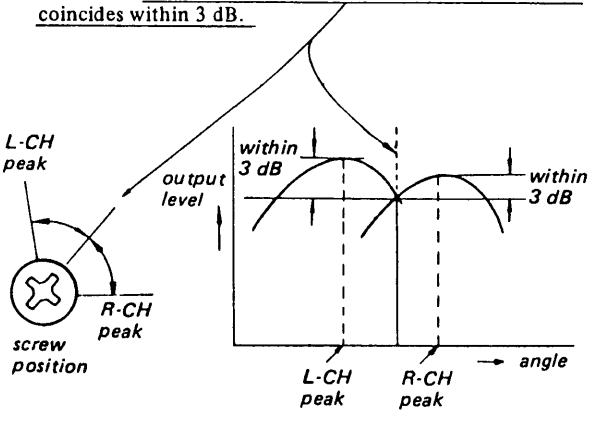

3. Check the phase in the PB mode.

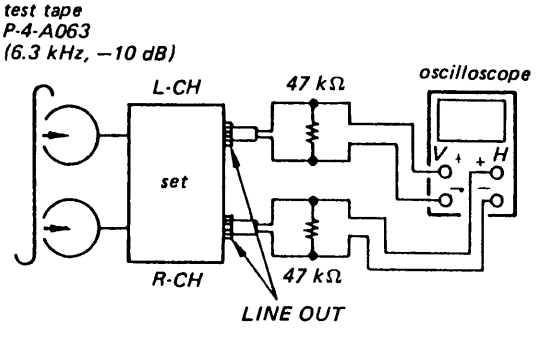

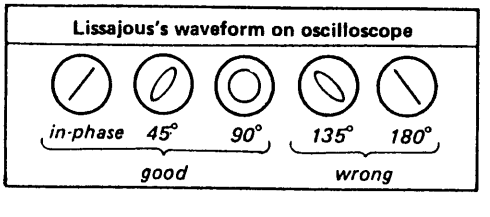

4. Repeat the above adjustment for the PB REV mode.

Capstan Motor Tape Speed Adjustment

Procedure:

1. Put the set into the FWD PB mode.

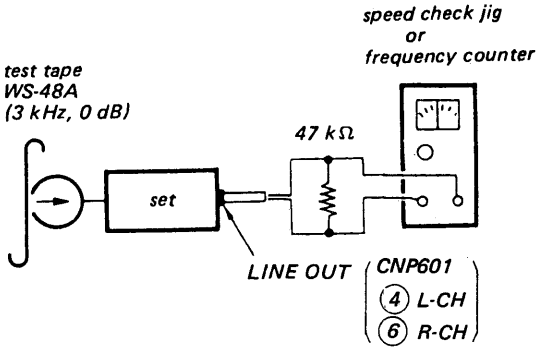

Specification: Constant speed

Speed check jig	Frequency counter
−1.5 to +2.5%	2,955 to 3,075 Hz

Adjust so that the frequency difference between the FWD and REV modes is within 1.5% (45 dB).

Adjustment Location: RV01

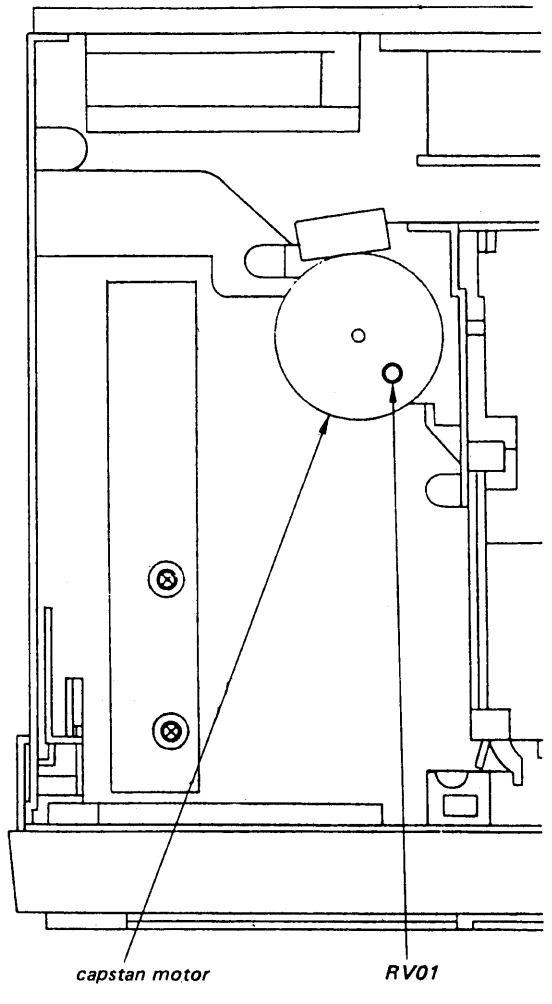

DOLBY NR Level Adjustment

Setting:

DOLBY NR switch: OFF
METAL switch: OFF

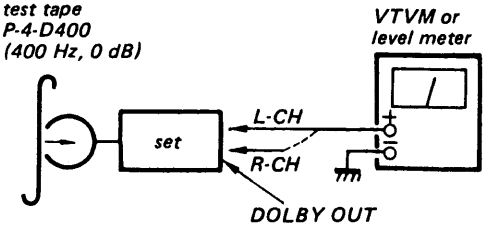

Procedure:

1. Put the set into the FWD PB mode.
2. Adjust RV101 (L-CH) and RV201 (R-CH) so that VTVM reading is − 4.7 ± 0.3 dB.
3. Put the set into the REV PB mode.
4. Adjust RV102 (L-CH) and RV202 (R-CH) so that VTVM reading is − 4.7 ± 0.3 dB. (− 4.7 ± 0.3 dB: approx. 0.47 to 0.44 V)

Adjustment Locationn : MAIN board

[MAIN BOARD] (Conductor Side)

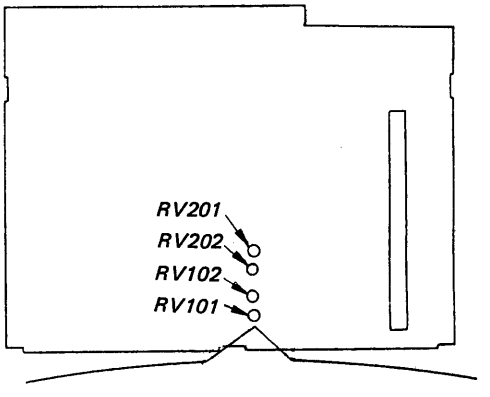

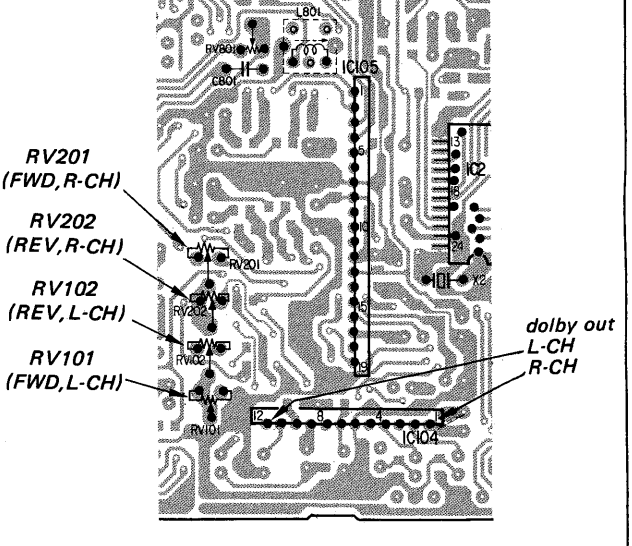

REFERENCE

Tape End Detection Adjustment

Tape End Detection adjustment
Before adjusting,set to the test mode 2.
(Refer to Torque Measurement.)

Test tape: *C-60 (or any)*
Setting: *FF or REW*

Procedures:

1. Confirm that the both voltages of CH1 and CH2 are more than 4 V at their higher level and less than 1 V at their lower level.
2. If the specification above is not satisfied make a solder bridge at the portion of the pattern marked with *1 on MAIN BOARD, and confirm that the specification of Procedure 1 is satisfied.

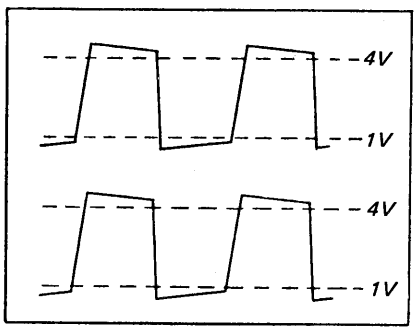

Adustment Location : MAIN board

[MAIN BOARD] (Conductor Side)

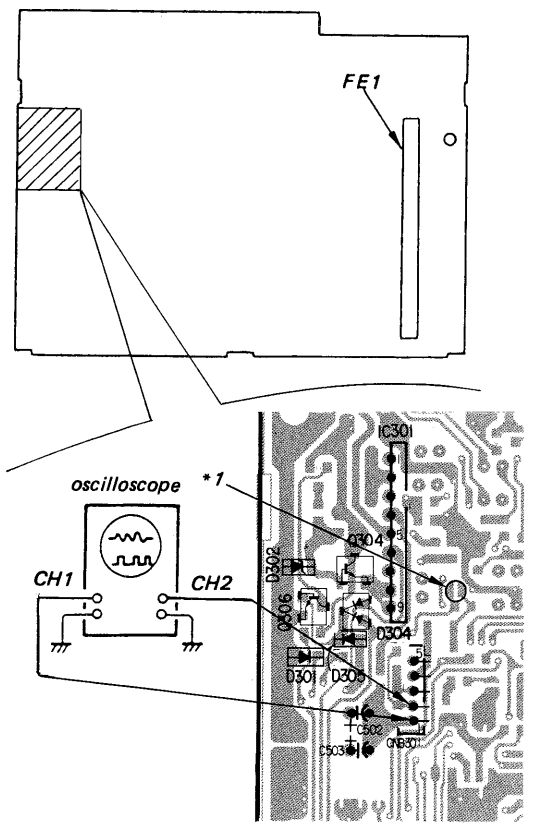

TUNER SECTION

Cautions during repair
When the front end is defective, replace it by a new one because its internal block is difficult to repair.

Before MW/SW Auto Scan/Stop Level Adustment, set to the test mode 1.

Setting Procedure:

1. While pressing "SDK" (S724) and "1" (S702) buttons simultaneously,press "RESET" (S740) button.
2. When the test mode is set and "LOUD" is on in MW/SW mode,measurement is available.
   It becomes the standard 28 ± 4 dB, SW 32 ± 4 dB.
   "⏸" (PAUSE mark) is displayed on the right foot of the display window.
3. Test mode releasing procedure after measuring is pressing "OFF" (S734) or "RESET" (S740) buttons.
   * FM Auto Scan/Stop Level Adjustment is available on either normal operation or the test mode operation.

LCD display pattern on setting the test mode 1 (step 1).

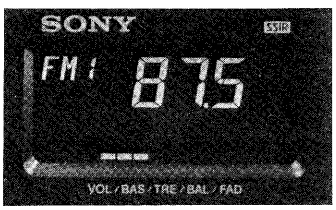

* First display pattern in 12 steps.

LCD display pattern during MW/SW receiving on the test mode 1.

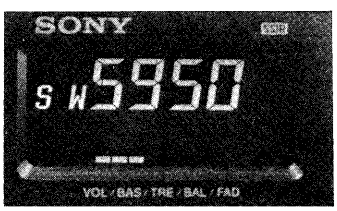

FM Auto Scan/Stop Level Adjustment

Setting:

Band switch: : FM
MONO switch : ON
Frequency : 98.0 MHz

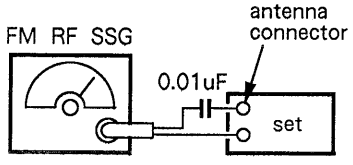

Carrier frequency: 98.0 MHz
Output level: 25 dB
Mode: mono, unmodulated

Procedure:

1. Tune in 98.0 MHz.
2. Adjust RV2 so that the VOM reading changes from low to high (5 V reference voltage).
3. When the FM RF SSG's output level is 25 ± 4 dB, check that the auto scan is stopped.

MW/SW Auto Scan/Stop Level Adjustment

Note : This adjustment should be made after FM auto scan stop level adjustment is completed.

Setting:

Band switch: MW/SW
Frequency: MW; 999 kHz
SW; 6,080 kHz

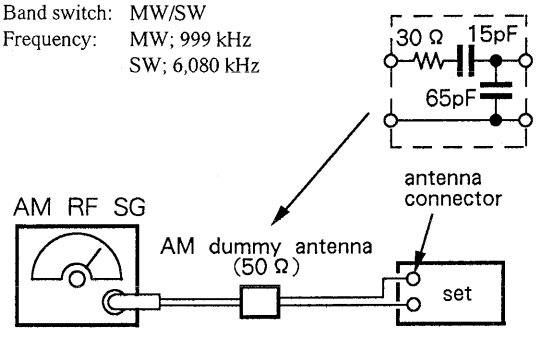

Carrier frequency: MW; 999 kHz
SW; 6,080 kHz
Output level: MW; 28 dB
SW; 32 dB
Mode: no modulation

Procedure:

Band: MW

1. Tune in 999 kHz.
2. Adjust RV3 so that the VOM reading changes from low to high (5.6 V reference voltage).
3. When the AM RF SG's output level is 28 ± 4 dB, check that the auto scan is stopped.

Band: SW

1. Tune in 6,080 kHz.
2. When the AM RF SG's output level is 32 ± 4 dB, check that the auto scan is stopped.

[MAIN BOARD] (Conductor Side)

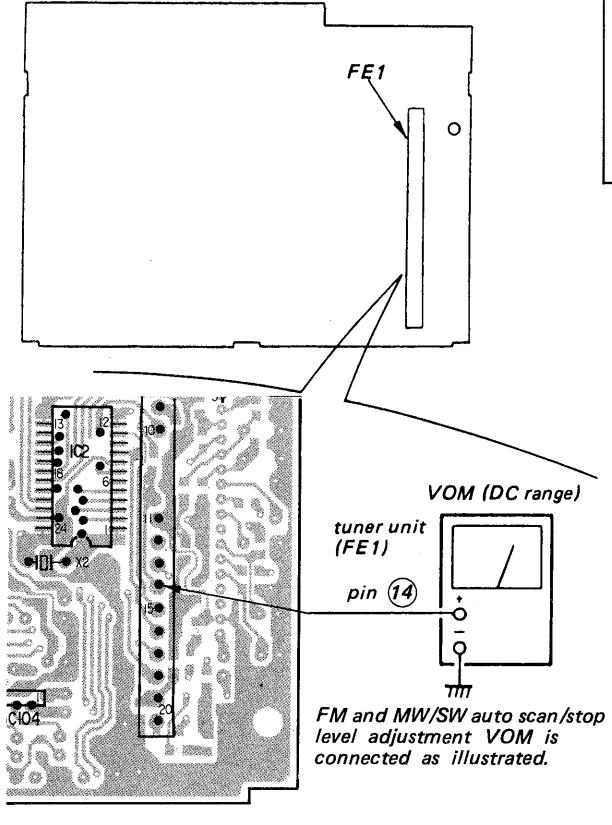

FM and MW/SW auto scan/stop level adjustment VOM is connected as illustrated.

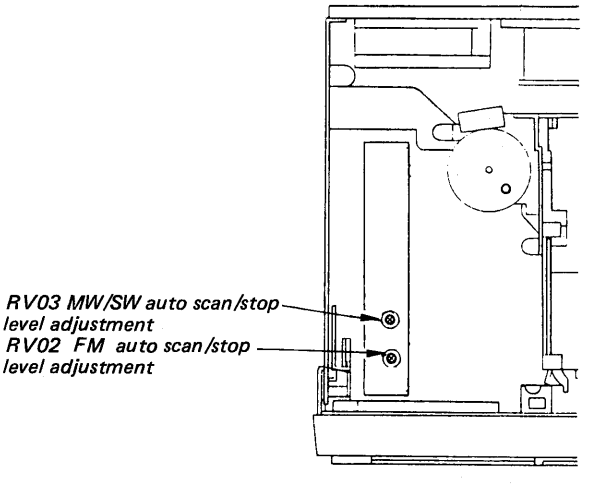

FM Stereo Separation Adjustment

Setting:

Band switch: FM
Frequency: 98.0 MHz

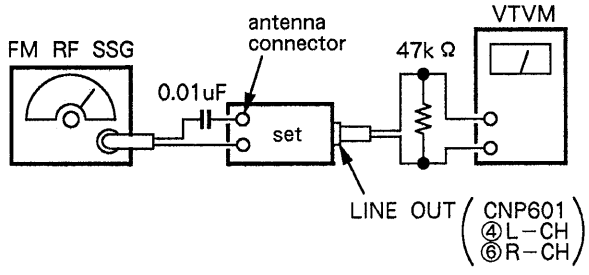

Carrier frequency: 98.0 kHz
Output level: 70 dB
Modulation: main; 1 kHz, 33.75 kHz deviation
sub; 1 kHz, 33.75 kHz deviation
19 kHz pilot; 7.5 kHz deviation

Procedure:

1. Adjust RV1 for a best stereo separation at a LINE OUT level of approximately − 10 dB.

Specification: 28 dB or more.

FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ Adjust RV1 for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ Adjust RV1 for minimum reading.

L-CH Stereo separation: Ⓐ − Ⓑ
R-CH Stereo separation: Ⓒ − Ⓓ
The separations of both channels shoul be equal.

2. If the result is not enough, make a solder bridge at Ⓧ position and step back to proceduer 1.

Adjustment Location:

[MAIN BOARD] (Conductor Side)

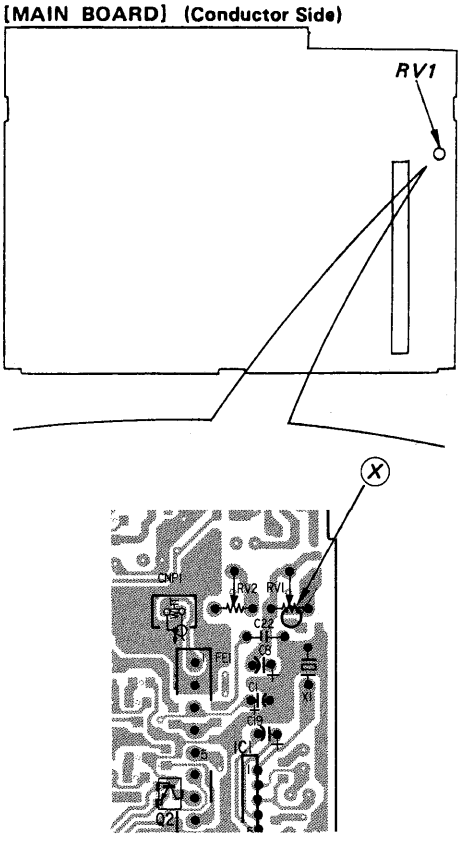

FM Carrier Leakage

Seeting:

Band switch: FM
Frequency: 98.0MHz

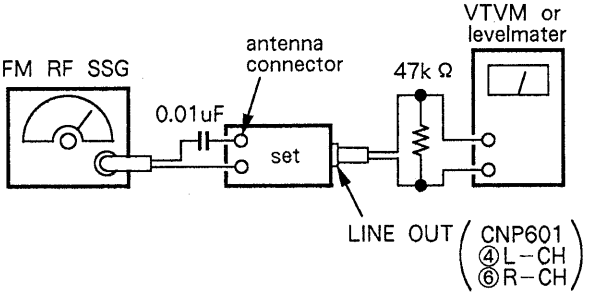

Carrier frequency: 98.0 kHz
Output level: 70 dB
Modulation: main; 33.75 kHz
sub; 33.75 kHz
19 kHz pilot; 7.5 kHz

Procedure:

Adjust with RV2 so that the carrier leakage becomes to the best condition.

Adjustment Location:

[MAIN BOARD] (Conductor Side)

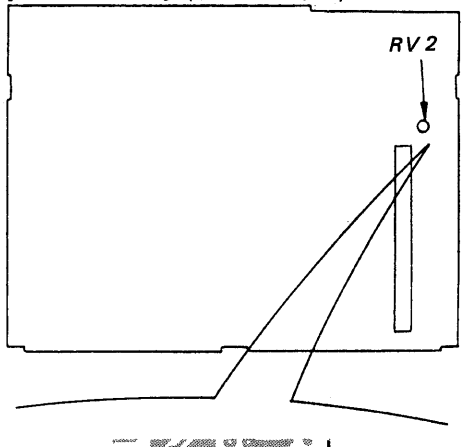

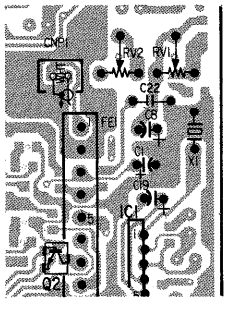

ARI Level Adjustment

Seeting:

Band switch: FM
Frequency: 98.0MHz

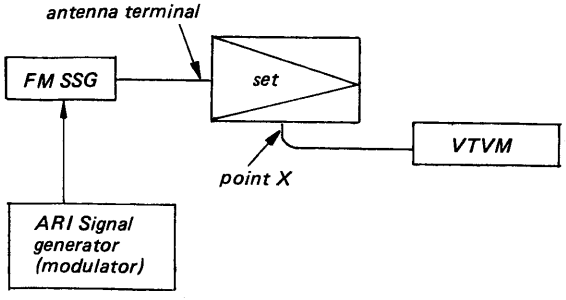

Carrier frequency: 98.0 kHz
Output level: 60 dB
Modulation: 75 kHz deviation
ARI modulation: SK; 1.3%
DK; 30%
BK; 60%

Procedure:

1. Adjust L801 so that the level of 125 Hz signal becomes maximum.
2. Adjust RV801 in the same way.

Specification: 1 Vrms or more

Adjustment Location: main board

[MAIN BOARD] (Conductor Side)

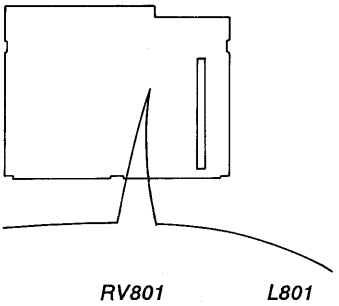

[MAIN BOARD] (Component Side)

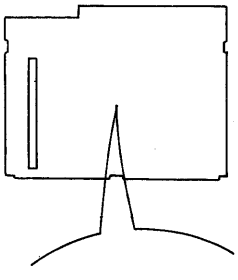

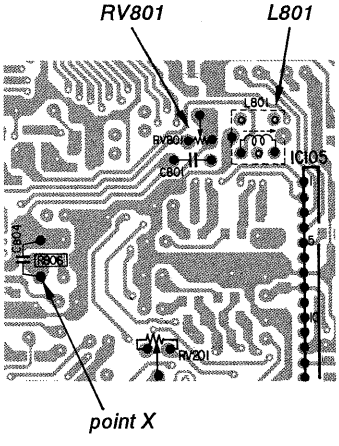

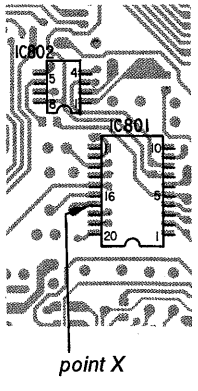

SECTION 4
DIAGRAMS

4-1. TUNER UNIT SCHEMATIC DIAGRAM

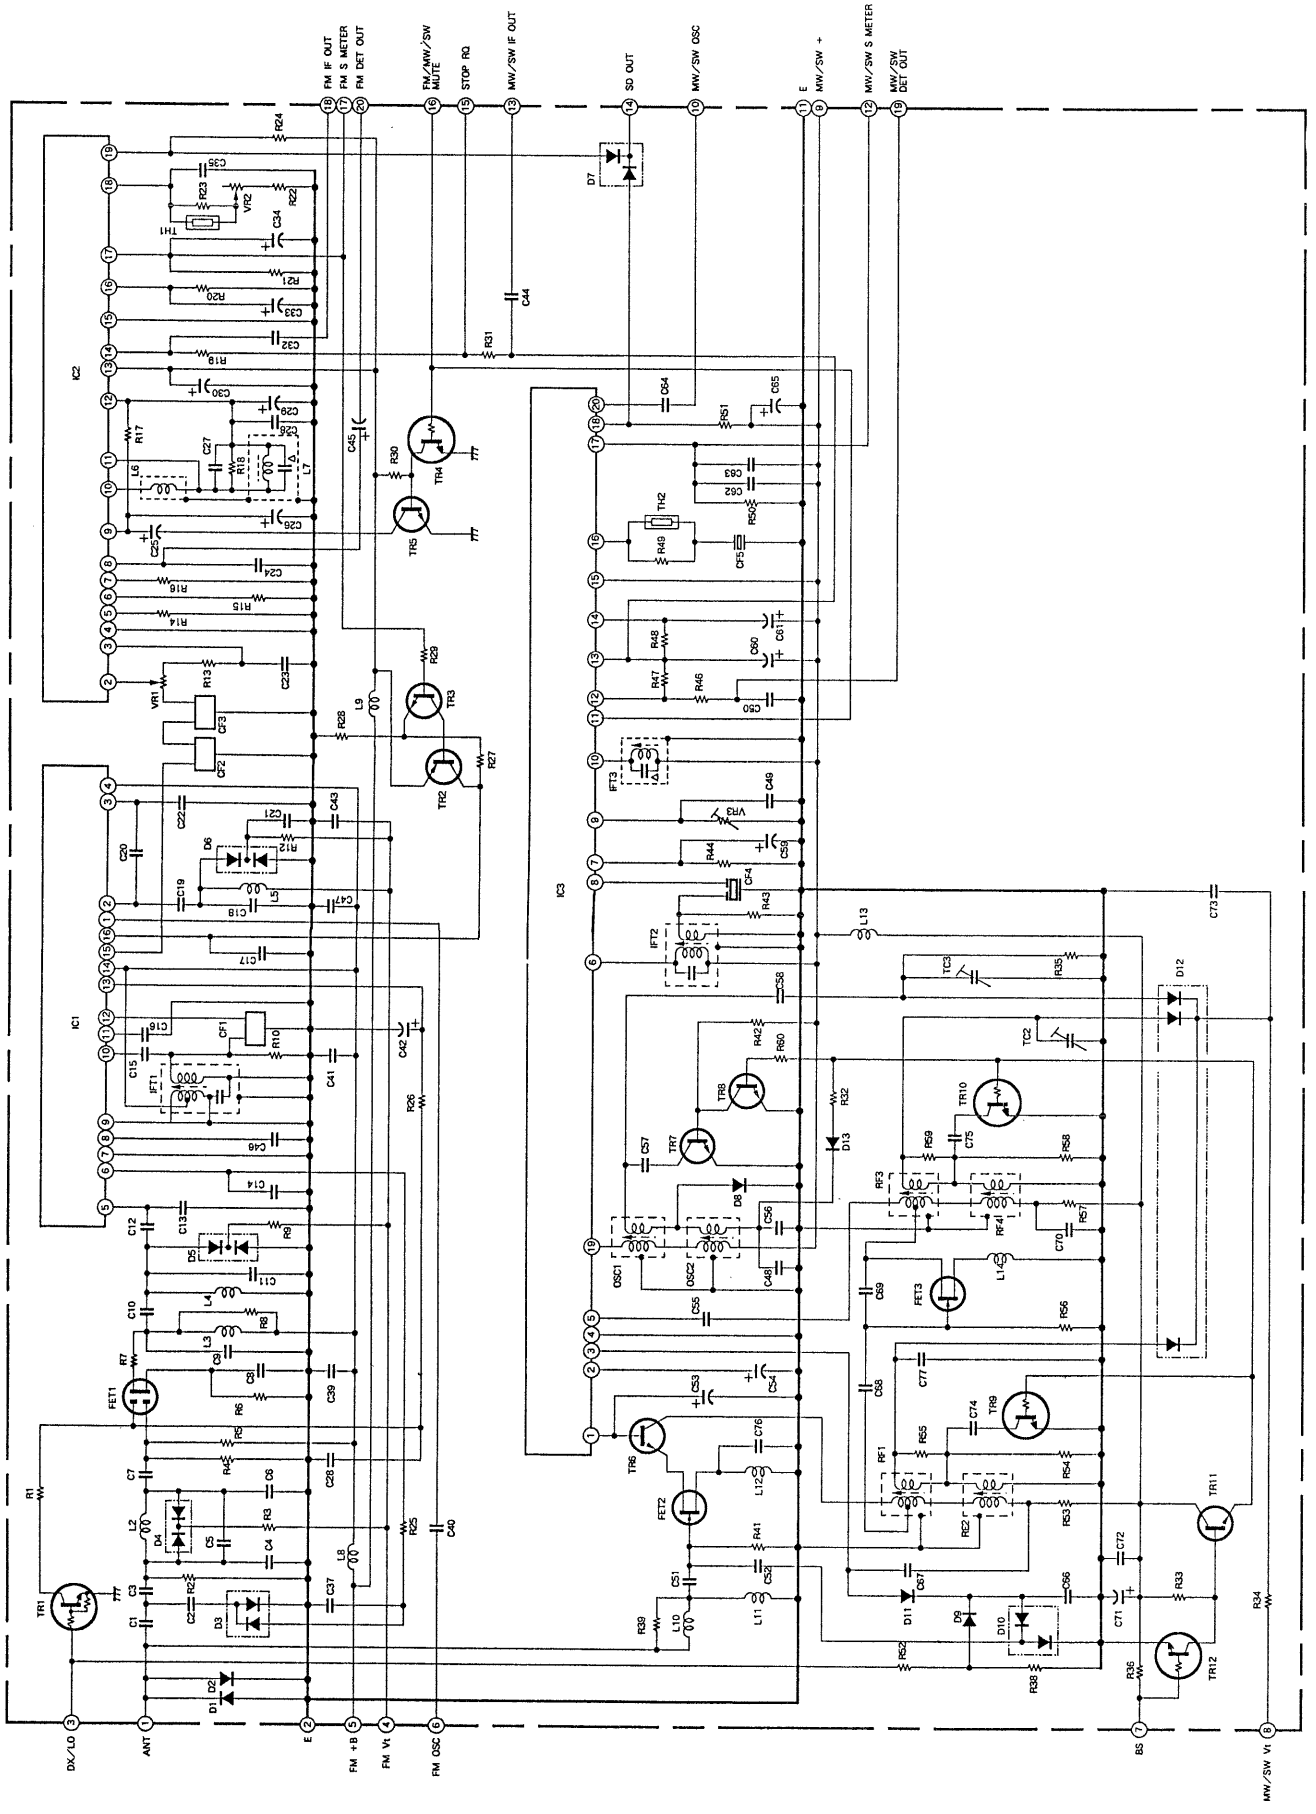

4-2. IC501 (μPD75516G) FUNCTIONAL DESCRIPTION

IC 501 (μPD 75516G) DESCRIPTION

Pin No.	Name	I/O	Description
1	AO	I	Destination setting input.
2	AVREF	I	A/D converter reference voltage input.
3	VDD	—	Positive power input.
4	VDD	—	
5	LM+	O	Forward rotation motor control.
6	LM-	O	Reverse rotation motor control.
7	DPL	O	Direction plunger.
8	DPM	O	Capstan motor control.
9	POS3	I	Tape mechanical deck position switch.
10	POS2	I	
11	POS1	I	
12	POS0	I	
13	MUTE	O	Muting control.
14	COLOR	O	Color illumination switching control.
15	VOLCE	O	Electronic volume enable signal.
16	LCDCE	O	LCD driver enable signal.
17	DATA IN	I	Information input from PLL-IC.
18	DATA OUT	O	Serial data output.
19	CLK OUT	O	Serial transmission clock.
20	PLLCE	O	PLL-IC enable signal.
21	KI3	I	Key information input.
22	KI2	I	
23	KI1	I	
24	KI0	I	
25	KO7	O	Key-return signal source.
26	KO6	O	
27	KO5	O	
28	KO4	O	
29	KO3	O	
30	KO2	O	
31	KO1	O	
32	KO0	O	

Pin No.	Name	I/O	Description
33	GND	—	Ground.
34	SIG2	O	Audio-signal switching signal.
35	SIG1	O	
36	AUX-ON	O	AUX signal ON.
37	PPA MUTE	O	PW-AMP mute.
38	METAL	I/O	Metal select.
39	DOLBY	O	Dolby ON/OFF select.
40	DOLBY-C	O	Dolby B/C select. (H: B, L: C)
41	STEREO	I/O	Auto stereo/forced monochrome select.
42	PTUNER	O	Tuner power-antenna output.
43	ILL-ON	O	Illumination output.
44	POWER	O	System power output.
45	BEEP	O	Buzzer output signal (2KHz/1KHz).
46	DK	I	DK signal input.
47	SK	I	SK signal input.
48	BK	I	BK signal input.
49	REMCOM	I	Remote control input.
50	CD-DATA-IN	I	Auto changer information input.
51	—	—	—
52	CD-CLK-IN	I	CD data input clock.
53	BU-CHECK	I	Back-up check.
54	—	—	—
55	—	—	32.7 kHz.
56	—	—	Subsystem clock.
57	—	—	—
58	—	—	4.19 MHz.
59	—	—	Main system clock.
60	RESET	I	Reset input.
61	CD-DATA	O	CD data transmission data line.
62	CD-CLK	O	CD data transmission clock line.
63	DSPSEL	O	Display-select.
64	OUT-RUN	O	AUX-STOP signal.
65	CD-MUTE	I	CD mute request input.

Pin No.	Name	I/O	Description
66	CD-CHECK	I	CD loaded/not loaded check.
67	AUX-MUTE	I	AUX mute request input.
68	REM-IN	I	AUX operation request input.
69	HANDLE	I	Handle switch input.
70	—	—	—
71	N/R	I	Tape-running direction input. (L: normal, R: reverse)
72	AMS/IN	I	Tape audio signal input.
73	—	—	—
74	ACC	I	Accessory input.
75	LINE-IN	I	Equalizer remote input.
76	REEL2	I	Feed reel input.
77	REEL1	I	Take-up reel input.
78	TEST	I	Test mode switch.
79	A2	I	Regions setting input.
80	A1	I	

4-3. PRINTED WIRING BOARDS

Note:

- ○——— : parts extracted from the component side.
- ——— : parts extracted from the conductor side.
- ■ : parts mounted on the conductor side.
- ● : Through hole.
- ▨ : Pattern on the side which is seen.
- ▫ : Pattern of the rear side.
- ▭ : Chip components extracted from the rear side.

● Semiconductor Lead Layouts

BA14741F
BU4081BF

NMX3S900
EV1200

ON2170-R-LF
ON2170-S-LF

BA3430FS
LC7218M

TDA1518Q

RLZ-J11A
RLZ-J4.7A

μPD75516GF-094-3B9

BU4052BF

10E2

CL-55Y/PG-D

LC7582

DSA3A4

M5280FP

DTZ11A
DTZ4.3B
DTZ4.7A
DTZ5.1B
DTZ6.6B
DTZ6.2B
DTZ8.2B
DTZ9.1B
1SS332

M54644BL

● Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D1	J-15	IC501	I-10
D2	H-15	IC502	I-6
D3	G-14	IC701	B-10
D4	G-14	IC801	H-5
D5	J-15	IC802	H-4
D101	I-15		
D201	H-14	Q1	J-15
D301	G-9	Q2	H-15
D302	G-9	Q3	G-15
D304	G-9	Q4	G-15
D305	G-9	Q5	H-15
D401	G-13	Q6	H-15
D402	G-14	Q7	G-14
D403	G-14	Q8	I-15
D404	G-14	Q9	G-14
D405	G-14	Q10	G-13
D406	G-13	Q11	H-3
D408	G-13	Q12	G-14
D410	G-5	Q101	F-6
D501	H-8	Q102	G-7
D502	H-8	Q103	E-6
D503	G-10	Q201	F-6
D504	G-7	Q202	G-7
D506	H-10	Q203	E-6
D507	F-14	Q301	F-5
D508	G-6	Q302	G-5
D509	G-6	Q303	G-8
D510	J-6	Q304	G-9
D513	J-9	Q305	F-9
D514	J-9	Q306	G-9
D515	J-7	Q401	G-5
D516	J-7	Q505	H-5
D517	J-7	Q507	G-7
D518	J-8	Q508	H-7
D519	F-10	Q509	J-8
D520	F-15	Q510	F-2
D530	F-2	Q514	F-15
D601	F-1	Q515	G-15
D603	I-13	Q516	F-13
D604	F-12	Q517	F-4
D701	B-2	Q518	G-13
D702	B-2	Q519	F-13
D703	C-1	Q520	F-13
D704	B-1	Q521	F-10
D705	B-1	Q522	F-10
D706	A-1	Q525	I-11
D707	A-7	Q526	I-11
D708	A-7	Q527	G-6
D709	A-6	Q528	H-6
D710	A-5	Q529	H-6
D711	B-5	Q530	H-6
D712	B-4	Q531	H-6
D713	B-3	Q532	I-6
D714	A-5	Q534	I-11
D715	A-4	Q601	F-12
D716	A-3	Q602	F-12
D717	B-3	Q603	F-12
D718	B-2	Q701	C-11
D719	B-2	Q702	B-11
D720	A-3	Q703	B-11
D721	A-2	Q704	B-11
D722	A-2		
D723	B-11		
D724	B-11		
D801	I-12		
IC1	H-15		
IC2	H-15		
IC101	I-4		
IC102	G-2		
IC103	I-3		
IC104	J-14		
IC105	H-14		
IC106	H-3		
IC107	F-11		
IC207	F-10		
IC301	F-10		

【KEY BOARD】 (COMPONENT SIDE)

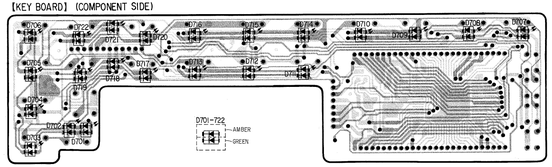

【MAIN BOARD】 (COMPONENT SIDE)

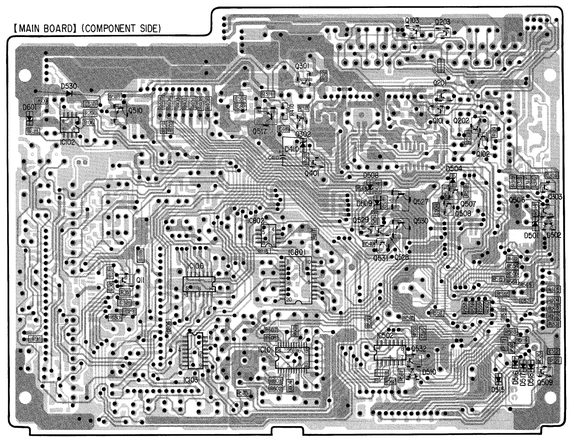

【KEY BOARD】(CONDUCTOR SIDE)

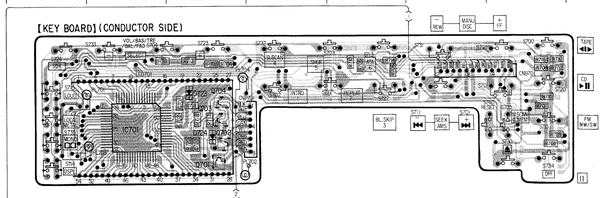

M901
CAPSTAN MOTOR

S901
POWER

M902
LOADING MOTOR

【MAIN BOARD】
(CONDUCTOR SIDE)

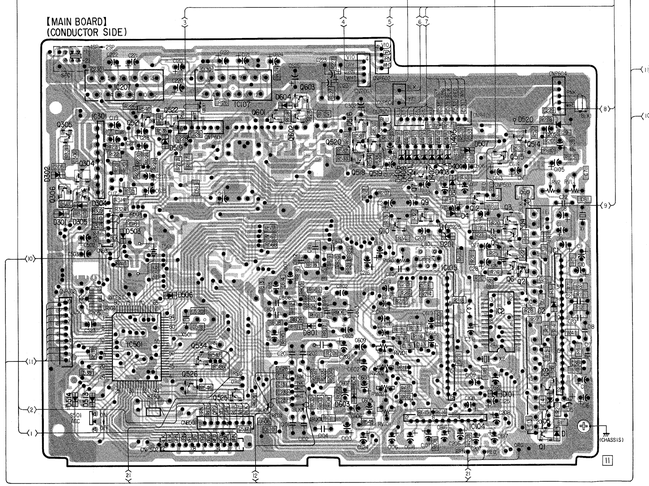

BLANKET CONNECTOR



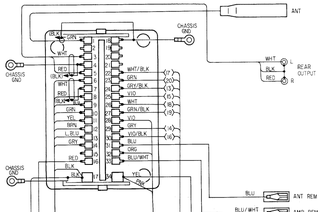

【SWITCH BOARD】



HP901
PLAYBACK HEAD



【PM BOARD】

【REEL BOARD】



CD CHANGER IN



LCD701 LCD UNIT

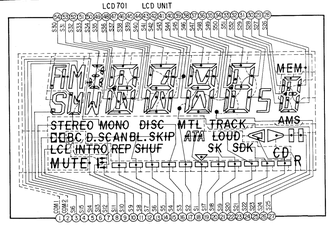

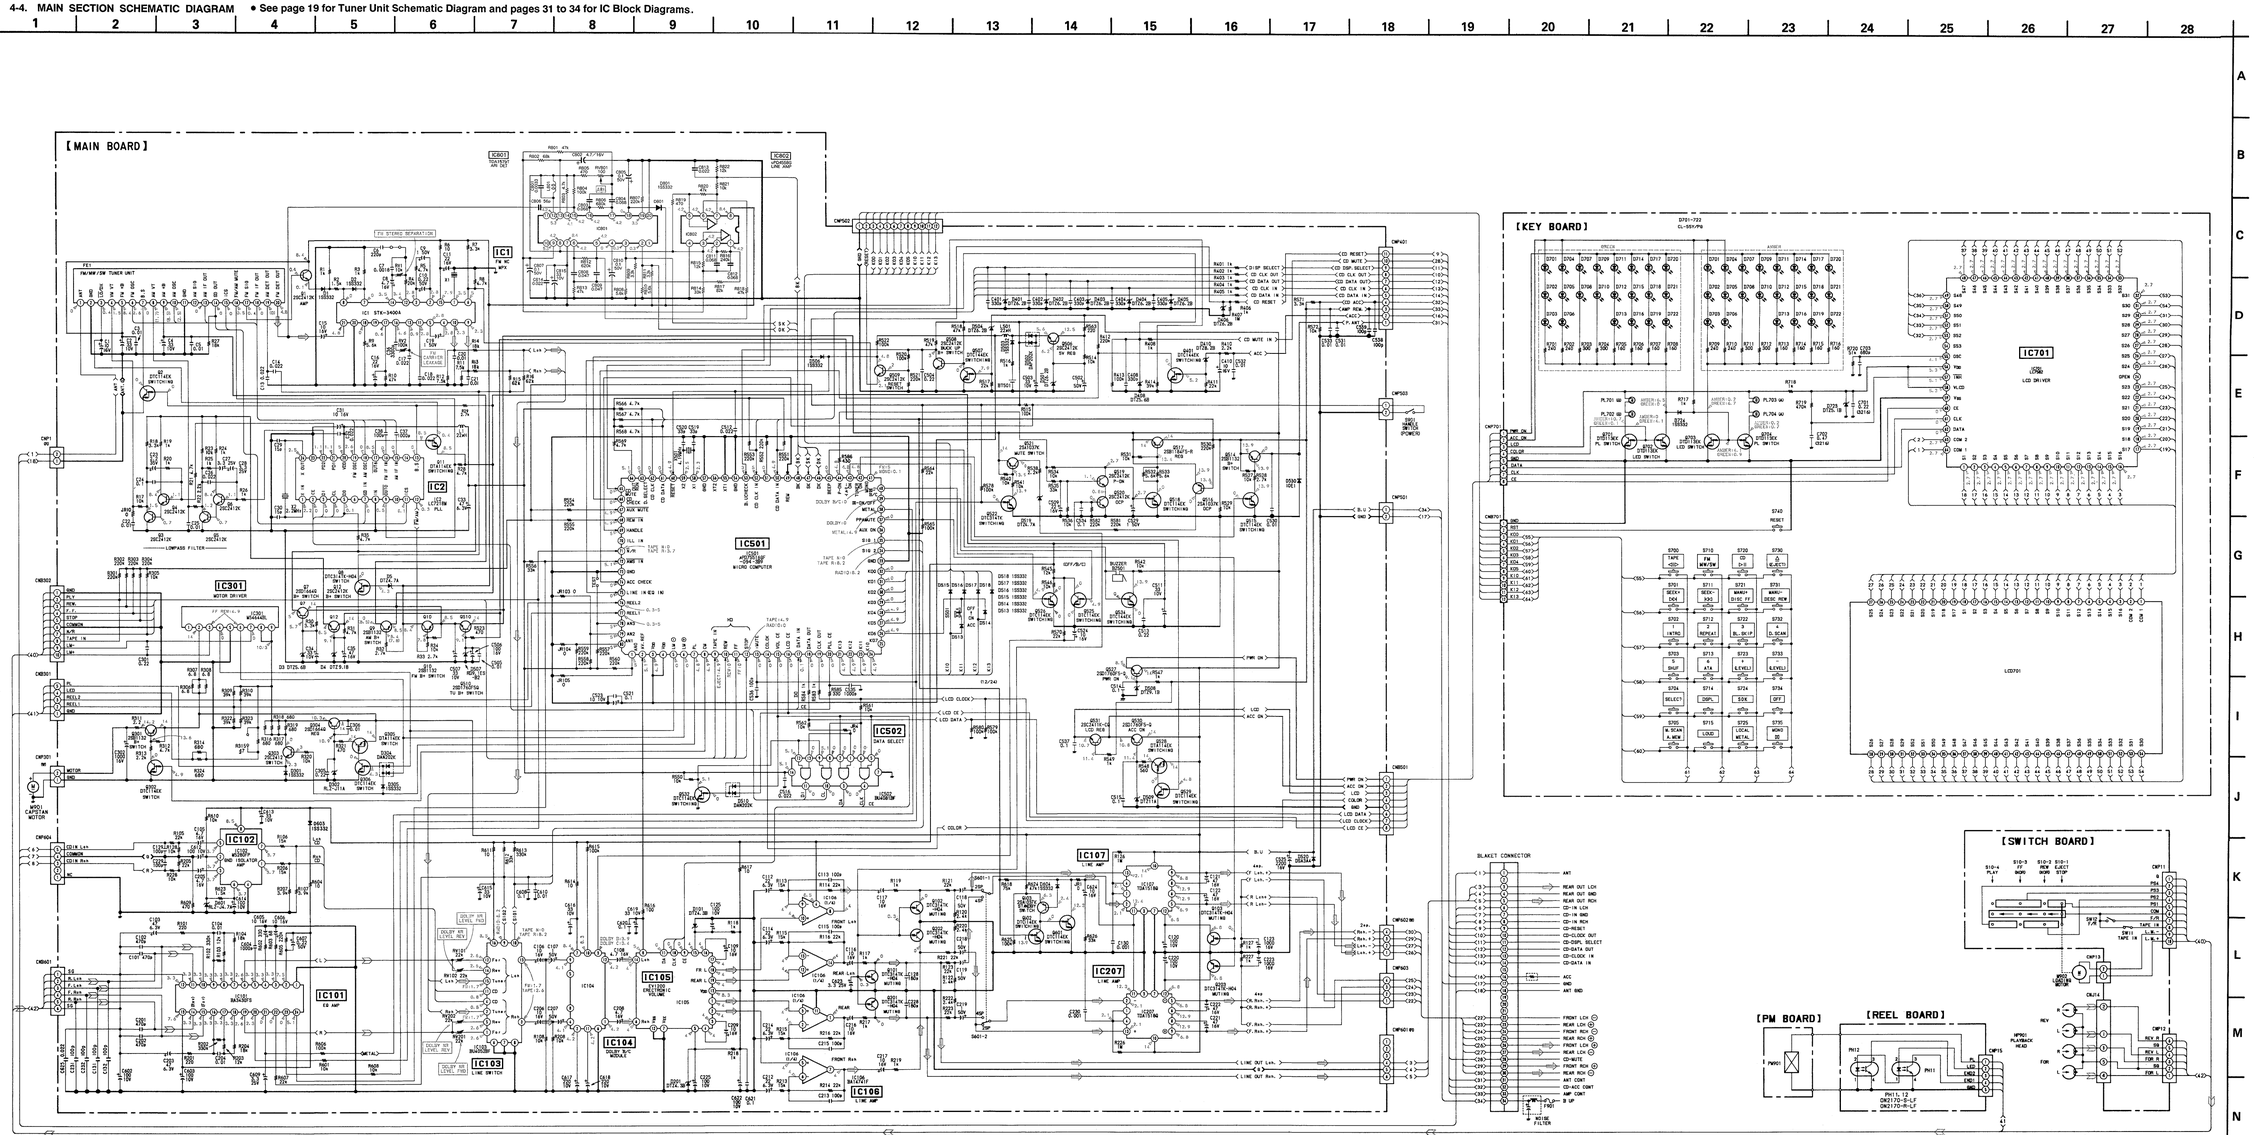

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF
  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- e ⏚⏚⏚⏚⏚ : B ÷ Line.
- e ▭ : adjustment for repair.
- e Power voltage is dc 14.4 V and fed with regurated dc power supply from external power voltage jack.
- e Voltages are dc with respect to ground unless otherwise noted.
- e Voltages are taken with a VOM (10 MΩ/V).
  Voltage variations may be noted dus to normal production tolerances.
  no mark :FM or PLAY
  ( ) :WM or SW
- e Signal path.
  ⇨ : FM ⇨ : PB

● IC Block Diagrams

IC1 STK-3400

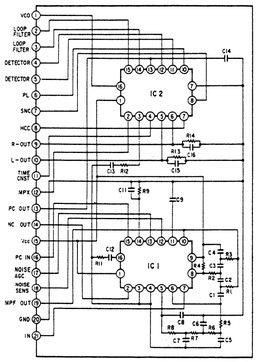

IC2 LC7218M

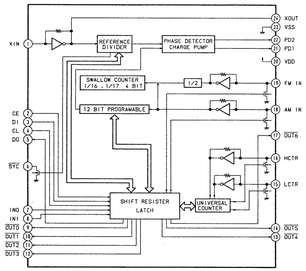

IC101 BA3430FS

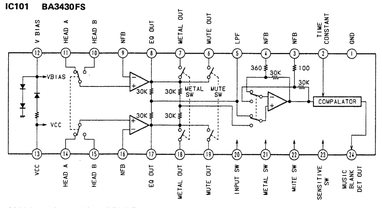

IC104 DOLBY B/C MODULE

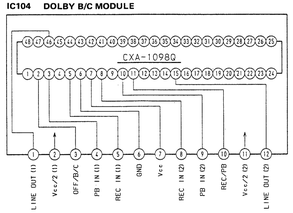

IC105 STK3570

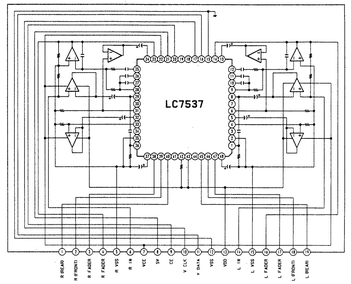

IC301 M54644BL

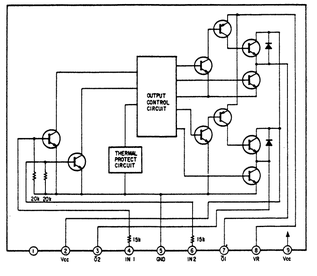

IC107 TDA1518Q

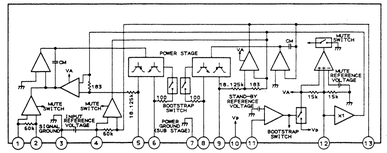

IC801 TDA1579

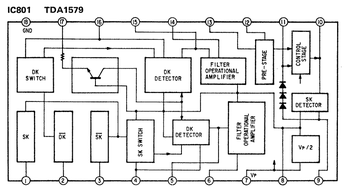

SECTION 5
EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- Color Indication of Appearance Parts
  Example:
  (RED)...KNOB, BALANCE (WHITE)
  ↑ Cabinet's Color ↑ Parts' Color

(1) FRONT PANEL SECTION

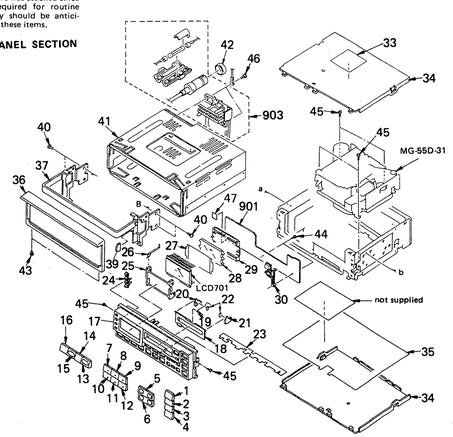

No.	Part No.	Description	Remarks
1	3-349-473-11	BUTTON (OFF)	
2	3-349-491-21	BUTTON (FM/MW/SW)	
3	3-349-472-31	BUTTON (CD)	
4	3-349-474-41	BUTTON (TAPE)	
5	3-349-492-11	BUTTON (SEEK AMS)	
6	3-349-492-41	BUTTON (MANU DISC)	
7	3-349-471-01	BUTTON (INTRO/1)	
8	3-349-471-11	BUTTON (REPEAT/2)	
9	3-349-471-21	BUTTON (BL.SKIP/3)	
10	3-349-471-31	BUTTON (D.SCAN/4)	
11	3-349-496-01	BUTTON (SHUF/5)	
12	3-349-496-11	BUTTON (ATA/6)	
13	3-349-441-01	BUTTON (LEVEL, +)	
14	3-349-444-01	BUTTON (SELECT)	
15	3-349-442-01	BUTTON (LEVEL, -)	
16	3-349-443-11	BUTTON (SDK)	
17	3-349-445-25	PANEL, FRONT	
18	3-349-449-92	DOOR, CASSETTE	
19	3-349-454-01	SPRING (C DOOR), TORSION	
20	3-349-447-01	PLATE (LEFT), LIGHT GUIDE	
21	3-349-446-01	PLATE (RIGHT), LIGHT GUIDE	
22	*3-901-417-01	SPACER	
23	*3-353-454-01	PLATE (F.P), GROUND	
24	3-349-450-01	BUTTON (4 GANG)	
25	*3-349-453-01	PLATE (LCD), GROUND	
26	*3-353-410-01	PLATE, GROUND	
27	3-349-440-01	SHEET (REFLECTOR)	
28	*3-349-438-01	PLATE (LCD), LIGHT GUIDE	
29	*3-349-439-01	HOLDER (LIGHT GUIDE PLATE)	
30	3-349-448-02	BUTTON (EJECT)	
33	*3-353-490-01	LABEL, MODEL NUMBER (AE6)	
34	*3-353-402-11	COVER	
35	*3-344-560-21	INSULATOR (3)	
36	3-344-564-01	FRAME, ORNAMENTAL	
37	X-3344-508-1	HANDLE ASSY	
39	3-344-526-02	BUTTON (RELEASE)	
40	3-344-561-01	SCREW (MXY5)	
41	*X-3344-509-3	BRACKET ASSY	
42	3-566-347-00	COVER (A), CONNECTOR	
43	7-627-553-38	SCREW, PRECISION +P 2X3	
44	7-685-103-19	SCREW +P 2X5 TYPE2 NON-SLIT	
45	7-621-770-87	SCREW +PTT 2.6X5 (S)	
46	7-682-652-09	SCREW +PSW 3X16	
47	3-327-119-01	SPACER (A)	
901	*1-633-896-11	PC BOARD, KEY	
903	1-575-169-11	CORD (WITH CONNECTOR)	

(2) CHASSIS SECTION

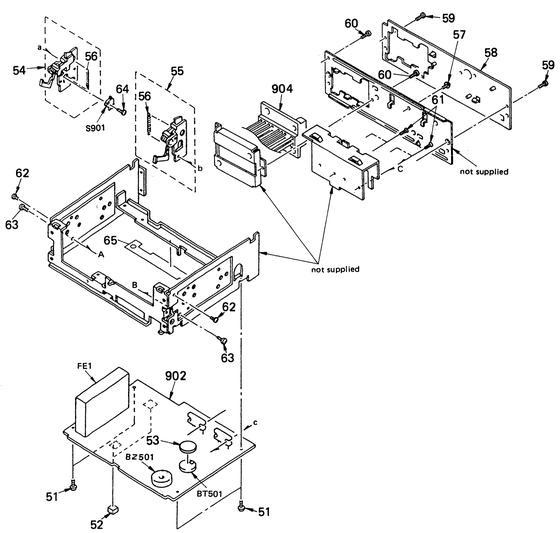

No.	Part No.	Description	Remarks
51	3-344-501-11	SCREW (+ PTT 3X8), GROUND POINT	
52	9-911-841-XX	CUSHION, CASSETTE LID	
53	*3-896-343-01	SHEET, INSULATING	
54	X-3344-502-1	LOCK ASSY (LEFT)	
55	X-3344-503-1	LOCK ASSY (RIGHT)	
56	3-645-189-00	SPRING, TENSION	
57	3-353-447-01	SCREW, TAPPING, WASHER HEAD	
58	*3-349-499-01	COVER	
59	7-621-770-XX	SCREW +PTT 2.6X8 (S)	
60	7-682-546-04	SCREW +PTT 3X5 (S)	
61	7-685-234-14	SCREW +BKTP 2.6X8 TYPE2 N-S	
62	7-627-553-38	SCREW, PRECISION +P 2X3	
63	7-621-773-86	SCREW +PTT 2.6X4 (S)	
64	7-621-283-00	SCREW +P 2X5	
65	*3-353-458-01	INSULATOR (CHASSIS)	
902	*A-3222-001-A	PC BOARD ASSY, MAIN	
904	1-574-929-11	CORD (WITH CONNECTOR)	
S901	1-570-771-11	SWITCH (POWER)	

(3) MD SECTION-1

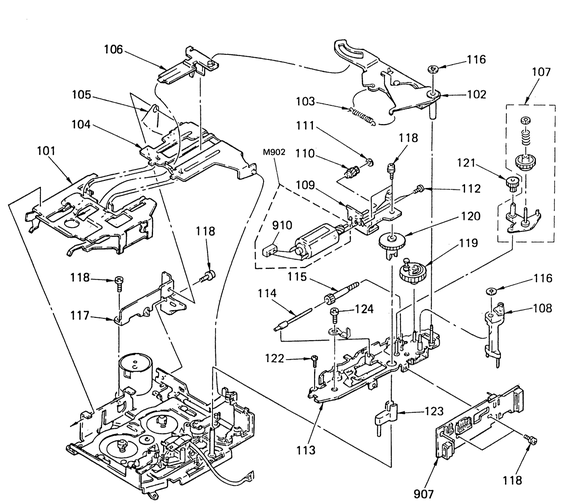

No.	Part No.	Description	Remarks
101	*3-344-103-01	HOUSING, CASSETTE	
102	*X-3344-121-1	ARM ASSY, SUCTION	
103	3-344-216-01	SPRING (SUCTION ARM), TENSION	
104	*X-3344-120-1	HANGER ASSY, HOUSING	
105	3-344-113-03	SPRING	
106	*3-344-118-01	CATCHER	
107	A-3239-954-A	GEAR ASSY, DRIVING ARM	
108	*X-3344-122-1	ARM ASSY, REVERSE	
109	*X-3344-110-1	BRACKET ASSY, MOTOR	
110	3-344-170-01	GEAR (A), DRIVING	
111	3-344-223-01	WASHER	
112	7-627-553-27	SCREW, PRECISION +P 2X2.5	
113	*X-3344-108-1	CHASSIS ASSY, MCU	
114	*3-344-157-01	SHAFT, DRIVING GEAR (B)	
115	3-344-156-01	GEAR (B), DRIVING	
116	3-344-222-01	WASHER	
117	*3-344-112-11	BRACKET, HANGER	
118	7-628-253-00	SCREW +PS 2X4	
119	X-3344-119-1	GEAR ASSY, LOADING CAM	
120	3-344-114-01	GEAR, MODE	
121	3-344-108-01	GEAR (A), FRICTION	
122	7-621-255-25	SCREW +P 2X4	
123	X-3344-117-1	ARM ASSY, MODE	
124	7-621-773-86	SCREW +P 2.6X4	
907	*1-624-413-11	PC BOARD, SWITCH	
910	*1-563-470-11	HOUSING, CONNECTOR 2P	
M902	A-3239-956-B	MOTOR SUB ASSY, L	

(4) MD SECTION-2

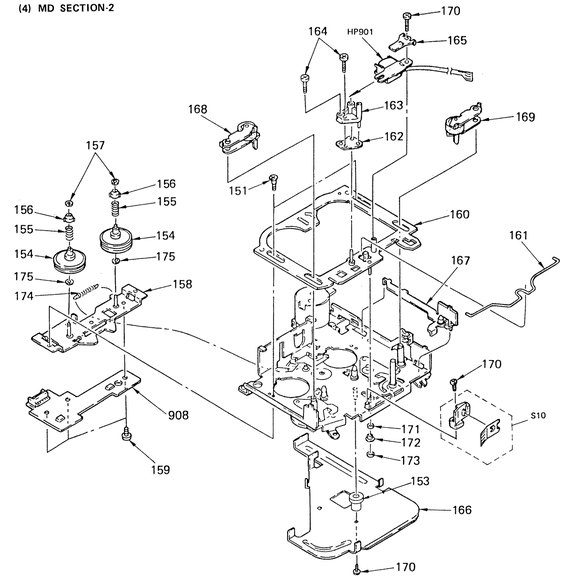

No.	Part No.	Description	Remarks
151	3-344-110-01	SCREW (HB), STEP	
153	3-344-251-01	RETAINER, MODE LEVER	
154	X-3344-104-1	TABLE ASSY, REEL	
155	3-344-143-01	SPRING (BT), COMPRESSION	
156	3-344-136-01	CAP, REEL	
157	3-344-224-01	WASHER	
158	*X-3344-105-1	BRACKET ASSY, REEL TABLE	
159	7-627-553-27	SCREW, PRECISION +P 2X2.5	
160	*X-3344-103-1	BASE ASSY, HEAD	
161	3-344-129-01	SPRING	
162	3-344-128-01	SEAM, DAH	
163	3-344-127-01	ARM, DAH	
164	3-344-254-01	SCREW, ADJ	
165	3-344-130-01	RETAINER, HEAD	
166	*3-344-220-01	COVER, MD	
167	*X-3344-118-1	LEVER ASSY, RVS CONVERSION	
168	X-3344-116-1	ARM (F) ASSY, PINCH	
169	X-3344-115-1	ARM (R) ASSY, PINCH	
170	7-627-850-18	SCREW, PRECISION +P 1.4X2.5	
171	3-344-117-01	ROLLER (B), H/B	
172	3-344-116-01	ROLLER (A), H/B	
173	3-344-222-01	WASHER	
174	3-344-217-01	SPRING(CAM LOCK LEVER), TENTION	
175	3-701-437-11	POLY-SLIDER (A)	
908	*1-628-613-11	PC BOARD, REEL	
HP901	1-543-506-11	HEAD, MAGNETIC (PLAYBACK)	
S10	A-3239-952-A	CONTACT SWITCH ASSY	

(5) MD SECTION-3

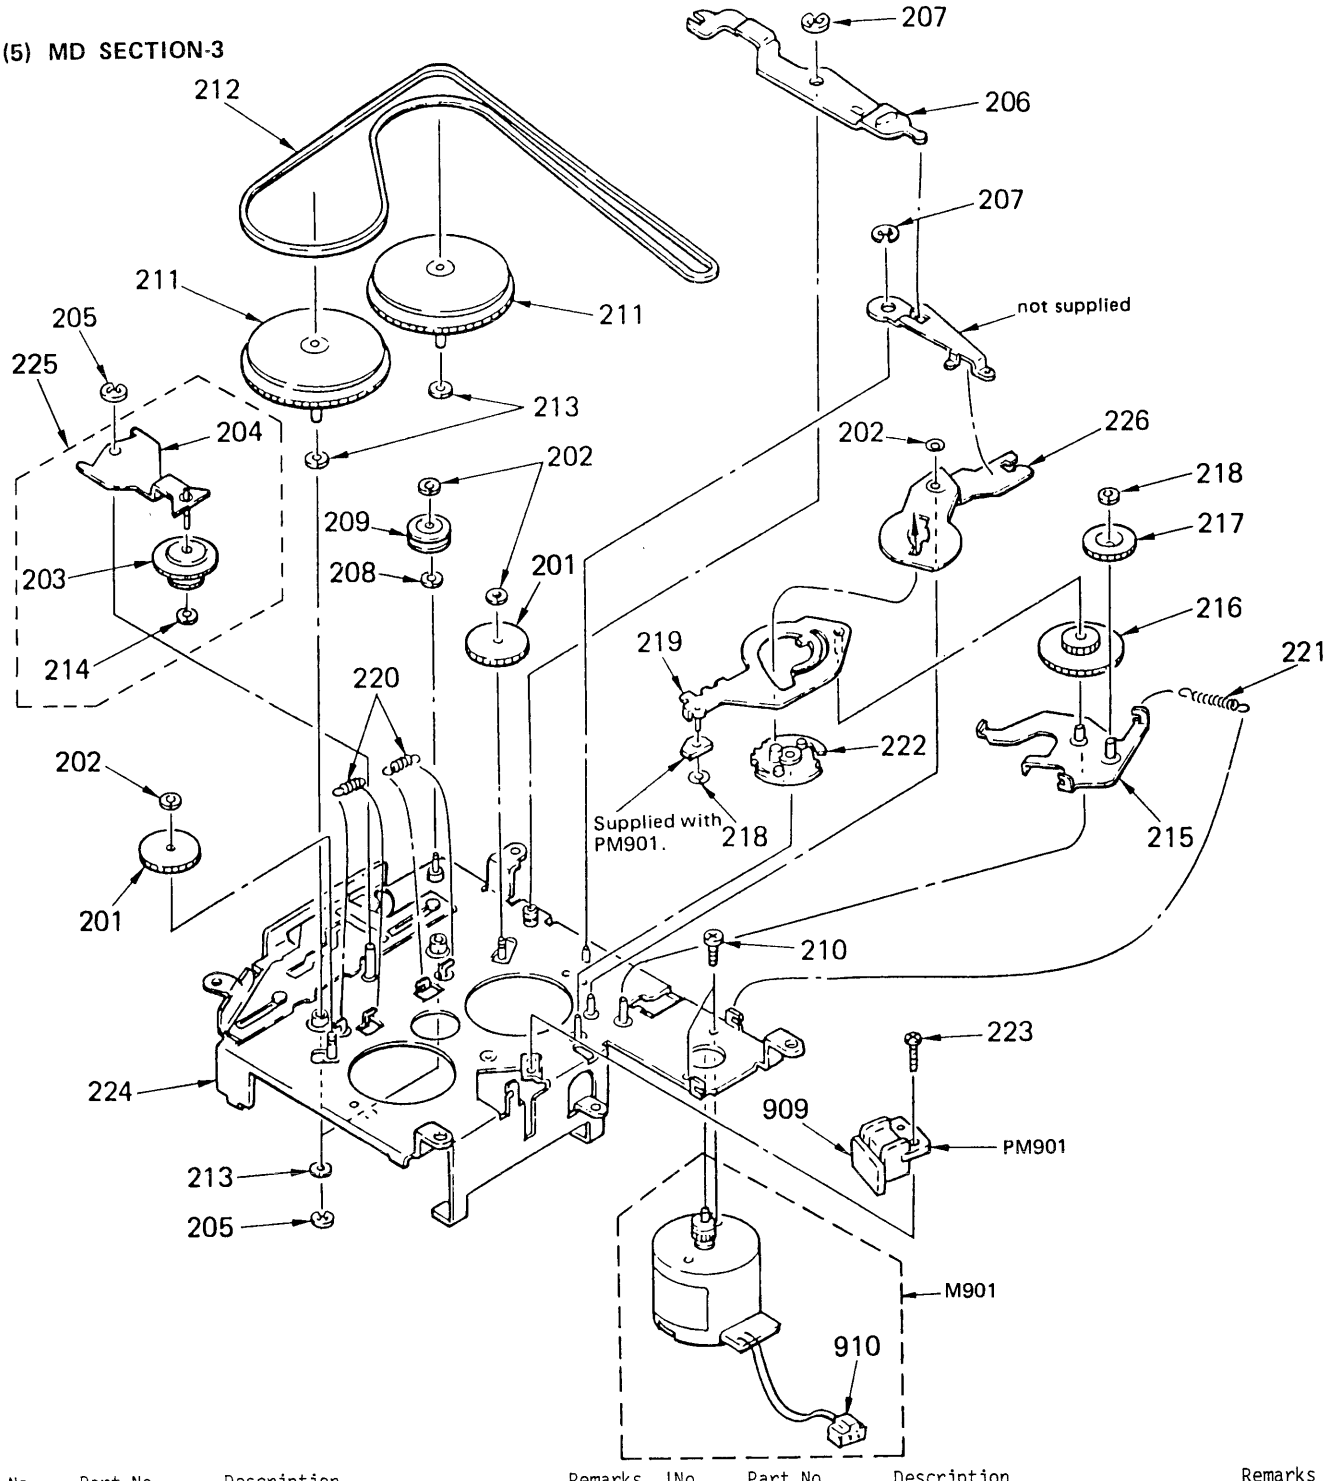

No.	Part No.	Description	Remarks
201	3-344-104-01	GEAR, PLAY	
202	3-344-222-01	WASHER	
203	X-3344-102-1	GEAR ASSY, FR	
204	*X-3344-101-1	ARM ASSY, FR	
205	3-590-768-00	RING (A), E	
206	*3-344-107-01	ARM, POWER	
207	7-624-104-04	STOP RING 2.0, TYPE -E	
208	3-701-436-01	WASHER, 1.6	
209	3-344-105-01	PULLEY (ASSY), MIDWAY	
210	7-627-553-27	SCREW, PRECISION +P 2X2.5	
211	3-344-231-01	FLYWHEEL (A)	
212	3-344-115-01	BELT	
213	3-701-437-11	POLY-SLIDER (A)	
214	3-344-224-01	WASHER	
215	*X-3344-106-1	LEVER ASSY, RVS GEAR (B)	
216	3-344-146-01	GEAR (B), RVS	
217	3-344-147-01	GEAR (A), RVS	
218	3-344-223-01	WASHER	
219	X-3344-107-1	LEVER ASSY, CAM LOCK	
220	3-344-218-02	SPRING (PLAY ARM), TENSION	
221	3-344-215-01	SPRING, TENSION	
222	3-344-119-01	GEAR, RVS CAM	
223	7-627-850-67	SCREW, PRECISION +P 1.4X4	
224	*X-3344-135-1	CHASSIS ASSY, MECHANICAL	
225	*A-3239-947-A	GEAR SUB ASSY, FR	203,204,214
226	*X-3344-114-1	LEVER ASSY, RVS	
909	1-628-613-11	PC BOARD, PM	
910	*1-563-470-11	HOUSING, CONNECTOR 2P	
M901	X-3344-136-1	MOTOR SUB ASSY, CAPSTAN	
PM901	1-454-461-11	SOLENOID, PLUNGER	

SECTION 6
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF: μF, PF: μμF.

RESISTORS
- All resistors are in ohms.
- F: nonflammable

COILS
- MMH: mH, UH: μH

SEMICONDUCTORS
In each case, U: μ, for example:
UA...: μA..., UPA...: μPA...,
UPC...: μPC, UPD...: μPD...

Ref.No.	Part No.	Description			
901	*1-633-896-11	PC BOARD, KEY			
902	*A-3222-001-A	PC BOARD ASSY, MAIN			
903	1-575-169-11	CORD (WITH CONNECTOR)			
904	1-574-929-11	CORD (WITH CONNECTOR)			
907	*1-624-413-11	PC BOARD, SWITCH			
908	*1-628-613-11	PC BOARD, REEL			
909	1-628-613-11	PC BOARD, PM			
910	*1-563-470-11	HOUSING, CONNECTOR 2P			
BT501	1-528-225-11	BATTERY, LITHIUM			
BZ501	1-529-078-11	BUZZER, PIEZOELECTRIC			
C1	1-126-157-11	ELECT	10MF	20%	16V
C2	1-124-229-00	ELECT	33MF	20%	10V
C3	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C4	1-124-229-00	ELECT	33MF	20%	10V
C5	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6	1-163-125-00	CERAMIC CHIP	220PF	10%	50V
C7	1-163-012-00	CERAMIC CHIP	0.0018MF	10%	50V
C8	1-126-281-11	ELECT	4.7MF	20%	16V
C9	1-124-438-00	ELECT	1MF	20%	50V
C10	1-124-464-11	ELECT	0.22MF	20%	50V
C11	1-124-234-00	ELECT	22MF	20%	16V
C13	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C14	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C15	1-126-157-11	ELECT	10MF	20%	16V
C16	1-124-234-00	ELECT	22MF	20%	16V
C17	1-163-157-00	FILM	0.022MF	5%	50V
C18	1-163-157-00	FILM	0.022MF	5%	50V
C19	1-124-438-00	ELECT	1MF	20%	50V
C20	1-136-153-00	FILM	0.01MF	5%	50V
C21	1-136-153-00	FILM	0.01MF	5%	50V
C22	1-136-153-00	FILM	0.01MF	5%	50V
C23	1-126-161-11	ELECT	2.2MF	20%	35V
C24	1-136-165-00	FILM	0.1MF	5%	50V
C25	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C26	1-163-157-00	FILM	0.022MF	5%	50V
C27	1-126-566-11	ELECT	3.3MF	20%	25V
C28	1-126-566-11	ELECT	3.3MF	20%	25V
C29	1-163-097-00	CERAMIC CHIP	15PF	5%	50V
C30	1-163-097-00	CERAMIC CHIP	15PF	5%	50V
C31	1-126-157-11	ELECT	10MF	20%	16V
C32	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C33	1-126-154-11	ELECT	47MF	20%	6.3V
C34	1-124-229-00	ELECT	33MF	20%	10V

Ref.No.	Part No.	Description			
C35	1-124-589-11	ELECT	47MF	20%	16V
C36	1-164-182-11	CERAMIC CHIP	0.0033MF	10%	50V
C37	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C38	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C101	1-130-467-00	MYLAR	470PF	5%	50V
C102	1-130-467-00	MYLAR	470PF	5%	50V
C103	1-126-154-11	ELECT	47MF	20%	6.3V
C104	1-136-153-00	FILM	0.01MF	5%	50V
C105	1-126-281-11	ELECT	4.7MF	20%	16V
C106	1-126-157-11	ELECT	10MF	20%	16V
C107	1-124-438-00	ELECT	1MF	20%	50V
C108	1-126-281-11	ELECT	4.7MF	20%	16V
C109	1-126-157-11	ELECT	10MF	20%	16V
C112	1-126-153-11	ELECT	22MF	20%	6.3V
C113	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C114	1-126-153-11	ELECT	22MF	20%	6.3V
C115	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C116	1-126-157-11	ELECT	10MF	20%	16V
C117	1-126-157-11	ELECT	10MF	20%	16V
C118	1-124-438-00	ELECT	1MF	20%	50V
C119	1-124-438-00	ELECT	1MF	20%	50V
C120	1-124-443-00	ELECT	100MF	20%	10V
C121	1-124-477-11	ELECT	47MF	20%	16V
C122	1-124-477-11	ELECT	47MF	20%	16V
C123	1-124-360-00	ELECT	1000MF	20%	16V
C125	1-124-584-00	ELECT	100MF	20%	10V
C128	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C129	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C130	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C131	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C132	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C201	1-130-467-00	MYLAR	470PF	5%	50V
C202	1-130-467-00	MYLAR	470PF	5%	50V
C203	1-126-154-11	ELECT	47MF	20%	6.3V
C204	1-136-153-00	FILM	0.01MF	5%	50V
C205	1-126-281-11	ELECT	4.7MF	20%	16V
C206	1-126-157-11	ELECT	10MF	20%	16V
C207	1-124-438-00	ELECT	1MF	20%	50V
C208	1-126-281-11	ELECT	4.7MF	20%	16V
C209	1-126-157-11	ELECT	10MF	20%	16V
C212	1-126-153-11	ELECT	22MF	20%	6.3V
C213	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C214	1-126-153-11	ELECT	22MF	20%	6.3V
C215	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C216	1-126-157-11	ELECT	10MF	20%	16V

Ref.No.	Part No.	Description			
C217	1-126-157-11	ELECT	10MF	20%	16V
C218	1-124-438-00	ELECT	1MF	20%	50V
C219	1-124-438-00	ELECT	1MF	20%	50V
C220	1-124-443-00	ELECT	100MF	20%	10V
C221	1-124-477-11	ELECT	47MF	20%	16V
C222	1-124-477-11	ELECT	47MF	20%	16V
C223	1-124-360-00	ELECT	1000MF	20%	16V
C225	1-124-584-00	ELECT	100MF	20%	10V
C228	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C229	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C230	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C231	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C232	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C301	1-163-081-00	CERAMIC CHIP	0.22MF		25V
C302	1-124-360-00	ELECT	1000MF	20%	16V
C305	1-163-081-00	CERAMIC CHIP	0.22MF		25V
C306	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C401	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C402	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C403	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C404	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C405	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C408	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C410	1-126-157-11	ELECT	10MF	20%	16V
C502	1-124-438-00	ELECT	1MF	20%	50V
C503	1-124-229-00	ELECT	33MF	20%	10V
C504	1-163-081-00	CERAMIC CHIP	0.22MF		25V
C505	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C506	1-124-584-00	ELECT	100MF	20%	10V
C507	1-124-229-00	ELECT	33MF	20%	10V
C509	1-124-234-00	ELECT	22MF	20%	16V
C511	1-124-229-00	ELECT	33MF	20%	10V
C512	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C513	1-163-081-00	CERAMIC CHIP	0.22MF		25V
C514	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C515	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C516	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C519	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C520	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C521	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C523	1-131-377-00	TANTALUM	10MF	10%	10V
C524	1-126-157-11	ELECT	10MF	20%	16V
C525	1-124-556-11	ELECT	2200MF	20%	16V
C529	1-124-438-00	ELECT	1MF	20%	50V
C530	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C531	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C532	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C533	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C534	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C535	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C536	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C537	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C538	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C539	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C602	1-124-584-00	ELECT	100MF	20%	10V
C603	1-124-584-00	ELECT	100MF	20%	10V
C604	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V

Ref.No.	Part No.	Description			
C605	1-126-157-11	ELECT	10MF	20%	16V
C606	1-126-157-11	ELECT	10MF	20%	16V
C607	1-124-464-11	ELECT	0.22MF	20%	50V
C608	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C609	1-126-566-11	ELECT	3.3MF	20%	25V
C610	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C612	1-124-584-00	ELECT	100MF	20%	10V
C613	1-124-229-00	ELECT	33MF	20%	10V
C614	1-124-584-00	ELECT	100MF	20%	10V
C615	1-124-229-00	ELECT	33MF	20%	10V
C616	1-124-229-00	ELECT	33MF	20%	10V
C617	1-126-176-11	ELECT	220MF	20%	10V
C618	1-126-176-11	ELECT	220MF	20%	10V
C619	1-124-229-00	ELECT	33MF	20%	10V
C620	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C621	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C622	1-124-584-00	ELECT	100MF	20%	10V
C623	1-126-566-11	ELECT	3.3MF	20%	25V
C624	1-126-157-11	ELECT	10MF	20%	16V
C625	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C701	1-163-081-00	CERAMIC CHIP	0.22MF		25V
C702	1-162-637-11	CERAMIC CHIP	0.47MF		16V
C703	1-163-007-11	CERAMIC CHIP	680PF	10%	50V
C801	1-130-477-00	FILM	0.0033MF	5%	50V
C802	1-126-281-11	ELECT	4.7MF	20%	16V
C803	1-136-175-00	FILM	0.068MF	5%	50V
C804	1-136-175-00	FILM	0.068MF	5%	50V
C805	1-124-463-00	ELECT	0.1MF	20%	50V
C806	1-163-111-00	CERAMIC CHIP	56PF	5%	50V
C807	1-124-463-00	ELECT	0.1MF	20%	50V
C808	1-136-161-00	FILM	0.047MF	5%	50V
C809	1-136-161-00	FILM	0.047MF	5%	50V
C810	1-124-463-00	ELECT	0.1MF	20%	50V
C811	1-136-175-00	FILM	0.068MF	5%	50V
C812	1-136-175-00	FILM	0.068MF	5%	50V
C813	1-163-157-00	FILM	0.022MF	5%	50V
C814	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C815	1-124-229-00	ELECT	33MF	20%	10V

CNJ14	1-565-038-11	CONNECTOR, F.P.C 5P
CNP1	*1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P
CNP11	*1-566-007-11	PIN, CONNECTOR (PC BOARD) 10P
CNP12	*1-566-003-11	PIN, CONNECTOR (PC BOARD) 6P
CNP13	*1-506-998-11	PIN, CONNECTOR (PC BOARD) 2P
CNP15	*1-566-002-11	PIN, CONNECTOR (PC BOARD) 5P
CNP301	*1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P
CNP401	*1-506-993-11	PIN, CONNECTOR (PC BOARD) 11P
CNP501	1-564-320-00	PIN, CONNECTOR 2P
CNP502	*1-566-009-11	PIN, CONNECTOR (PC BOARD) 12P
CNP503	*1-506-984-31	PIN, CONNECTOR (PC BOARD) 2P
CNP601	*1-506-988-11	PIN, CONNECTOR (PC BOARD) 6P
CNP602	*1-506-986-11	PIN, CONNECTOR (PC BOARD) 4P
CNP603	*1-506-986-11	PIN, CONNECTOR (PC BOARD) 4P
CNP604	*1-506-987-11	PIN, CONNECTOR (PC BOARD) 5P
CNP701	*1-506-990-11	PIN, CONNECTOR (PC BOARD) 8P

Ref.No.	Part No.	Description
D1	8-719-976-31	DIODE 1SS332
D2	8-719-976-31	DIODE 1SS332
D3	8-719-977-03	DIODE DTZ5.6B
D4	8-719-977-24	DIODE DTZ9.1B
D5	8-719-976-94	DIODE DTZ4.7A
D101	8-719-976-91	DIODE DTZ4.3B
D201	8-719-976-91	DIODE DTZ4.3B
D301	8-719-976-31	DIODE 1SS332
D302	8-719-973-30	DIODE RLZ-J11A
D304	8-719-400-18	DIODE MA152WK
D305	8-719-976-31	DIODE 1SS332
D401	8-719-977-07	DIODE DTZ6.2B
D402	8-719-977-07	DIODE DTZ6.2B
D403	8-719-977-07	DIODE DTZ6.2B
D404	8-719-977-07	DIODE DTZ6.2B
D405	8-719-977-07	DIODE DTZ6.2B
D406	8-719-977-07	DIODE DTZ6.2B
D408	8-719-977-03	DIODE DTZ5.6B
D410	8-719-977-20	DIODE DTZ8.2B
D501	8-719-977-07	DIODE DTZ6.2B
D502	8-719-104-34	DIODE 1S2836
D503	8-719-976-31	DIODE 1SS332
D504	8-719-977-07	DIODE DTZ6.2B
D506	8-719-976-31	DIODE 1SS332
D507	8-719-977-24	DIODE DTZ9.1B
D508	8-719-977-24	DIODE DTZ9.1B
D509	8-719-977-31	DIODE DTZ11A
D510	8-719-400-18	DIODE MA152WK
D513	8-719-976-31	DIODE 1SS332
D514	8-719-976-31	DIODE 1SS332
D515	8-719-976-31	DIODE 1SS332
D516	8-719-976-31	DIODE 1SS332
D517	8-719-976-31	DIODE 1SS332
D518	8-719-976-31	DIODE 1SS332
D519	8-719-976-94	DIODE DTZ4.7A
D520	8-719-945-59	DIODE DSA3A4
D530	8-719-200-02	DIODE 10E2
D601	8-719-972-42	DIODE RLZ-J4.7A
D603	8-719-976-31	DIODE 1SS332
D604	8-719-976-31	DIODE 1SS332
D701	8-719-975-27	DIODE CL-55Y/PG-D
D702	8-719-975-27	DIODE CL-55Y/PG-D
D703	8-719-975-27	DIODE CL-55Y/PG-D
D704	8-719-975-27	DIODE CL-55Y/PG-D
D705	8-719-975-27	DIODE CL-55Y/PG-D
D706	8-719-975-27	DIODE CL-55Y/PG-D
D707	8-719-975-27	DIODE CL-55Y/PG-D
D708	8-719-975-27	DIODE CL-55Y/PG-D
D709	8-719-975-27	DIODE CL-55Y/PG-D
D710	8-719-975-27	DIODE CL-55Y/PG-D
D711	8-719-975-27	DIODE CL-55Y/PG-D
D712	8-719-975-27	DIODE CL-55Y/PG-D
D713	8-719-975-27	DIODE CL-55Y/PG-D
D714	8-719-975-27	DIODE CL-55Y/PG-D
D715	8-719-975-27	DIODE CL-55Y/PG-D
D716	8-719-975-27	DIODE CL-55Y/PG-D
D717	8-719-975-27	DIODE CL-55Y/PG-D
D718	8-719-975-27	DIODE CL-55Y/PG-D
D719	8-719-975-27	DIODE CL-55Y/PG-D
D720	8-719-975-27	DIODE CL-55Y/PG-D
D721	8-719-975-27	DIODE CL-55Y/PG-D
D722	8-719-975-27	DIODE CL-55Y/PG-D
D723	8-719-976-99	DIODE DTZ5.1B
D724	8-719-976-31	DIODE 1SS332
D801	8-719-976-31	DIODE 1SS332
FE1	1-465-404-11	TUNER UNIT (FM/MW/SW)
HP901	1-543-506-11	HEAD, MAGNETIC (PLAYBACK)
IC1	1-808-515-11	IC NMX3S900
IC2	8-759-821-43	IC LC7218M
IC101	8-759-988-33	IC BA3430FS
IC102	8-759-631-00	IC M5280FP
IC103	8-759-932-64	IC BU4052BF
IC104	1-808-774-11	MODULE, DOLBY B/C
IC105	8-759-995-12	IC EV1200
IC106	8-759-988-36	IC BA14741F
IC107	8-759-981-45	IC TDA1518Q
IC207	8-759-981-45	IC TDA1518Q
IC301	8-759-631-01	IC M54644BL
IC501	8-759-148-51	IC UPD75516GF-094-3B9
IC502	8-759-932-86	IC BU4081BF
IC701	8-759-821-44	IC LC7582
IC801	8-759-998-24	IC TDA1579T
IC802	8-759-924-46	IC BA4560F
JR1	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR4	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR10	1-216-295-00	METAL GLAZE 0 5% 1/10W
JR103	1-216-295-00	METAL GLAZE 0 5% 1/10W
JR104	1-216-295-00	METAL GLAZE 0 5% 1/10W
JR105	1-216-295-00	METAL GLAZE 0 5% 1/10W
L1	1-410-513-11	INDUCTOR 22UH
L501	1-410-513-11	INDUCTOR 22UH
L801	1-424-036-11	COIL (FILTER)
LCD701	1-808-773-11	DISPLAY PANEL, LIQUID CRYSTAL
M901	X-3344-136-1	MOTOR SUB ASSY, CAPSTAN
M902	A-3239-956-B	MOTOR SUB ASSY, L
PH11	8-719-420-46	PHOTO SENSOR ON2170-R-LF
PH11	8-719-420-47	PHOTO SENSOR ON2170-S-LF
PH12	8-719-420-46	PHOTO SENSOR ON2170-R-LF
PH12	8-719-420-47	PHOTO SENSOR ON2170-S-LF
PL701	1-518-648-11	LAMP, PILOT
PL702	1-518-648-11	LAMP, PILOT
PL703	1-518-646-11	LAMP, PILOT
PL704	1-518-646-11	LAMP, PILOT
PM901	1-454-461-11	SOLENOID, PLUNGER
Q1	8-729-901-78	TRANSISTOR 2SC2412K-R
Q2	8-729-900-53	TRANSISTOR DTC114EK
Q3	8-729-901-78	TRANSISTOR 2SC2412K-R
Q4	8-729-901-78	TRANSISTOR 2SC2412K-R
Q5	8-729-901-78	TRANSISTOR 2SC2412K-R
Q6	8-729-901-78	TRANSISTOR 2SC2412K-R
Q7	8-729-106-68	TRANSISTOR 2SD1615A-GP
Q8	8-729-920-21	TRANSISTOR DTC314TK-H04
Q9	8-729-119-76	TRANSISTOR 2SA1175-HFE

Ref.No.	Part No.	Description
Q10	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q11	8-729-901-04	TRANSISTOR DTA114EK
Q12	8-729-901-78	TRANSISTOR 2SC2412K-R
Q101	8-729-920-31	TRANSISTOR DTC314TK
Q102	8-729-920-31	TRANSISTOR DTC314TK
Q103	8-729-920-31	TRANSISTOR DTC314TK
Q201	8-729-920-31	TRANSISTOR DTC314TK
Q202	8-729-920-31	TRANSISTOR DTC314TK
Q203	8-729-920-31	TRANSISTOR DTC314TK
Q301	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q302	8-729-900-53	TRANSISTOR DTC114EK
Q303	8-729-901-78	TRANSISTOR 2SC2412K-R
Q304	8-729-106-68	TRANSISTOR 2SD1615A-GP
Q305	8-729-901-04	TRANSISTOR DTA114EK
Q306	8-729-900-53	TRANSISTOR DTC114EK
Q401	8-729-901-01	TRANSISTOR DTC144EK
Q506	8-729-901-78	TRANSISTOR 2SC2412K-R
Q507	8-729-901-01	TRANSISTOR DTC144EK
Q508	8-729-901-78	TRANSISTOR 2SC2412K-R
Q509	8-729-901-78	TRANSISTOR 2SC2412K-R
Q510	8-729-921-48	TRANSISTOR 2SD1760F5
Q514	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q515	8-729-900-53	TRANSISTOR DTC114EK
Q516	8-729-216-22	TRANSISTOR 2SA1162
Q517	8-729-922-47	TRANSISTOR 2SB1184-F5-R
Q518	8-729-900-53	TRANSISTOR DTC114EK
Q519	8-729-901-78	TRANSISTOR 2SC2412K-R
Q520	8-729-901-78	TRANSISTOR 2SC2412K-R
Q521	8-729-216-22	TRANSISTOR 2SA1162
Q522	8-729-920-21	TRANSISTOR DTC314TK-H04
Q525	8-729-900-53	TRANSISTOR DTC114EK
Q526	8-729-900-53	TRANSISTOR DTC114EK
Q527	8-729-921-48	TRANSISTOR 2SD1760F5
Q528	8-729-901-04	TRANSISTOR DTA114EK
Q529	8-729-900-53	TRANSISTOR DTC114EK
Q530	8-729-921-48	TRANSISTOR 2SD1760F5
Q531	8-729-901-87	TRANSISTOR 2SC2411K-CQ
Q532	8-729-900-53	TRANSISTOR DTC114EK
Q534	8-729-901-01	TRANSISTOR DTC144EK
Q601	8-729-900-53	TRANSISTOR DTC114EK
Q602	8-729-900-53	TRANSISTOR DTC114EK
Q603	8-729-216-22	TRANSISTOR 2SA1162
Q701	8-729-904-66	TRANSISTOR DTD113EK
Q702	8-729-904-66	TRANSISTOR DTD113EK
Q703	8-729-904-66	TRANSISTOR DTD113EK
Q704	8-729-904-66	TRANSISTOR DTD113EK
R1	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R2	1-216-053-00	METAL GLAZE 1.5K 5% 1/10W
R3	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R4	1-216-080-00	METAL GLAZE 20K 5% 1/10W
R5	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W
R6	1-216-001-00	METAL GLAZE 10 5% 1/10W
R7	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W
R8	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W
R9	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W
R10	1-216-089-00	METAL GLAZE 47K 5% 1/10W
R11	1-216-070-00	METAL GLAZE 7.5K 5% 1/10W
R12	1-216-070-00	METAL GLAZE 7.5K 5% 1/10W
R13	1-216-079-00	METAL GLAZE 18K 5% 1/10W
R14	1-216-079-00	METAL GLAZE 18K 5% 1/10W
R15	1-216-092-00	METAL GLAZE 62K 5% 1/10W
R16	1-216-092-00	METAL GLAZE 62K 5% 1/10W
R17	1-216-073-00	METAL GLAZE 10K 5% 1/10W
R18	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W
R19	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R20	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R21	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W
R22	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W
R23	1-216-073-00	METAL GLAZE 10K 5% 1/10W
R24	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R25	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R26	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R27	1-216-079-00	METAL GLAZE 18K 5% 1/10W
R28	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W
R29	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W
R30	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W
R31	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W
R32	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W
R33	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W
R34	1-216-073-00	METAL GLAZE 10K 5% 1/10W
R35	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W
R101	1-216-033-00	METAL GLAZE 220 5% 1/10W
R102	1-216-109-00	METAL GLAZE 330K 5% 1/10W
R103	1-216-075-00	METAL GLAZE 12K 5% 1/10W
R104	1-216-079-00	METAL GLAZE 18K 5% 1/10W
R105	1-216-081-00	METAL GLAZE 22K 5% 1/10W
R106	1-216-077-00	METAL GLAZE 15K 5% 1/10W
R107	1-216-063-00	METAL GLAZE 3.9K 5% 1/10W
R108	1-216-073-00	METAL GLAZE 10K 5% 1/10W
R113	1-216-077-00	METAL GLAZE 15K 5% 1/10W
R114	1-216-081-00	METAL GLAZE 22K 5% 1/10W
R115	1-216-077-00	METAL GLAZE 15K 5% 1/10W
R116	1-216-081-00	METAL GLAZE 22K 5% 1/10W
R117	1-216-198-00	METAL GLAZE 1K 5% 1/8W
R118	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R119	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R120	1-216-058-00	METAL GLAZE 2.4K 5% 1/10W
R121	1-216-081-00	METAL GLAZE 22K 5% 1/10W
R122	1-216-058-00	METAL GLAZE 2.4K 5% 1/10W
R123	1-216-081-00	METAL GLAZE 22K 5% 1/10W
R126	1-216-121-00	METAL GLAZE 1M 5% 1/10W
R127	1-216-049-00	METAL GLAZE 1K 5% 1/10W
R128	1-216-073-00	METAL GLAZE 10K 5% 1/10W
R201	1-216-033-00	METAL GLAZE 220 5% 1/10W
R202	1-216-109-00	METAL GLAZE 330K 5% 1/10W
R203	1-216-075-00	METAL GLAZE 12K 5% 1/10W
R204	1-216-079-00	METAL GLAZE 18K 5% 1/10W
R205	1-216-081-00	METAL GLAZE 22K 5% 1/10W
R206	1-216-077-00	METAL GLAZE 15K 5% 1/10W
R207	1-216-063-00	METAL GLAZE 3.9K 5% 1/10W
R208	1-216-073-00	METAL GLAZE 10K 5% 1/10W
R213	1-216-077-00	METAL GLAZE 15K 5% 1/10W
R214	1-216-081-00	METAL GLAZE 22K 5% 1/10W
R215	1-216-077-00	METAL GLAZE 15K 5% 1/10W
R216	1-216-081-00	METAL GLAZE 22K 5% 1/10W

Ref.No.	Part No.	Description			
R217	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R218	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R219	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R220	1-216-058-00	METAL GLAZE	2.4K	5%	1/10W
R221	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R222	1-216-058-00	METAL GLAZE	2.4K	5%	1/10W
R223	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R226	1-216-121-00	METAL GLAZE	1M	5%	1/10W
R227	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R228	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R301	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R302	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R303	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R304	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R305	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R306	1-216-146-00	METAL GLAZE	6.8	5%	1/8W
R307	1-216-146-00	METAL GLAZE	6.8	5%	1/8W
R308	1-216-146-00	METAL GLAZE	6.8	5%	1/8W
R309	1-216-748-11	METAL GLAZE	39K	5%	1/10W
R310	1-216-748-11	METAL GLAZE	39K	5%	1/10W
R311	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R312	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R313	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R314	1-216-194-00	METAL GLAZE	680	5%	1/8W
R315	1-216-017-00	METAL GLAZE	47	5%	1/10W
R316	1-216-194-00	METAL GLAZE	680	5%	1/8W
R317	1-216-194-00	METAL GLAZE	680	5%	1/8W
R318	1-216-194-00	METAL GLAZE	680	5%	1/8W
R319	1-216-194-00	METAL GLAZE	680	5%	1/8W
R320	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R321	1-216-041-00	METAL GLAZE	470	5%	1/10W
R322	1-216-748-11	METAL GLAZE	39K	5%	1/10W
R323	1-216-748-11	METAL GLAZE	39K	5%	1/10W
R324	1-216-194-00	METAL GLAZE	680	5%	1/8W
R401	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R402	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R403	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R404	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R405	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R406	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R407	1-216-121-00	METAL GLAZE	1M	5%	1/10W
R408	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R410	1-249-421-11	CARBON	2.2K	5%	1/4W
R411	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R412	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R413	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R414	1-216-748-11	METAL GLAZE	39K	5%	1/10W
R514	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R515	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R516	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R517	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R518	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R519	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R520	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R521	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R522	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R523	1-216-041-00	METAL GLAZE	470	5%	1/10W

Ref.No.	Part No.	Description			
R527	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R528	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W
R529	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R530	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R531	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R532	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R533	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R534	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R535	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R536	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R538	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R540	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R541	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R542	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R545	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R546	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R547	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R548	1-216-043-00	METAL GLAZE	560	5%	1/10W
R549	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R550	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R551	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R552	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R553	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R554	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R555	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R556	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R557	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R558	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R559	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R560	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R561	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R562	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R563	1-216-033-00	METAL GLAZE	220	5%	1/10W
R564	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R565	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R566	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R567	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R568	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R569	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R570	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R571	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R572	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R578	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R579	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R580	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R581	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R582	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R583	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R584	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R585	1-216-037-00	METAL GLAZE	330	5%	1/10W
R586	1-216-040-00	METAL GLAZE	430	5%	1/10W
R601	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R602	1-216-037-00	METAL GLAZE	330	5%	1/10W
R603	1-216-021-00	METAL GLAZE	68	5%	1/10W
R604	1-216-001-00	METAL GLAZE	10	5%	1/10W
R605	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R606	1-216-097-00	METAL GLAZE	100K	5%	1/10W

Ref.No.	Part No.	Description			
R607	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R608	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R609	1-216-041-00	METAL GLAZE	470	5%	1/10W
R610	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R611	1-216-001-00	METAL GLAZE	10	5%	1/10W
R612	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R613	1-216-109-00	METAL GLAZE	330K	5%	1/10W
R614	1-216-001-00	METAL GLAZE	10	5%	1/10W
R615	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R616	1-216-025-00	METAL GLAZE	100	5%	1/10W
R617	1-216-001-00	METAL GLAZE	10	5%	1/10W
R618	1-216-094-00	METAL GLAZE	75K	5%	1/10W
R623	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R624	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R625	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R626	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R701	1-216-034-00	METAL GLAZE	240	5%	1/10W
R702	1-216-034-00	METAL GLAZE	240	5%	1/10W
R703	1-216-036-00	METAL GLAZE	300	5%	1/10W
R704	1-216-036-00	METAL GLAZE	300	5%	1/10W
R705	1-216-030-00	METAL GLAZE	160	5%	1/10W
R706	1-216-030-00	METAL GLAZE	160	5%	1/10W
R707	1-216-030-00	METAL GLAZE	160	5%	1/10W
R708	1-216-030-00	METAL GLAZE	160	5%	1/10W
R709	1-216-034-00	METAL GLAZE	240	5%	1/10W
R710	1-216-034-00	METAL GLAZE	240	5%	1/10W
R711	1-216-036-00	METAL GLAZE	300	5%	1/10W
R712	1-216-036-00	METAL GLAZE	300	5%	1/10W
R713	1-216-030-00	METAL GLAZE	160	5%	1/10W
R714	1-216-030-00	METAL GLAZE	160	5%	1/10W
R715	1-216-030-00	METAL GLAZE	160	5%	1/10W
R716	1-216-030-00	METAL GLAZE	160	5%	1/10W
R717	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R718	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R719	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R720	1-216-090-00	METAL GLAZE	51K	5%	1/10W
R801	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R802	1-216-093-00	METAL GLAZE	68K	5%	1/10W
R803	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R804	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R805	1-216-041-00	METAL GLAZE	470	5%	1/10W
R806	1-216-117-00	METAL GLAZE	680K	5%	1/10W
R807	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R808	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R809	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R810	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R811	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R812	1-216-116-00	METAL GLAZE	620K	5%	1/10W
R813	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R814	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R815	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R816	1-216-106-00	METAL GLAZE	240K	5%	1/10W
R817	1-216-095-00	METAL GLAZE	82K	5%	1/10W
R818	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R819	1-216-041-00	METAL GLAZE	470	5%	1/10W
R820	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R821	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R822	1-216-075-00	METAL GLAZE	12K	5%	1/10W

Ref.No.	Part No.	Description
RV1	1-228-994-00	RES, ADJ, CARBON 10K
RV2	1-228-997-00	RES, ADJ, CARBON 100K
RV101	1-237-606-11	RES, ADJ, METAL GRAZE 22K
RV102	1-237-606-11	RES, ADJ, METAL GRAZE 22K
RV201	1-237-606-11	RES, ADJ, METAL GRAZE 22K
RV202	1-237-606-11	RES, ADJ, METAL GRAZE 22K
RV801	1-238-940-11	RES, ADJ, METAL GRAZE 100
S10	A-3239-952-A	CONTACT SWITCH ASSY
S501	1-553-510-00	SWITCH, SLIDE (ACC)
S601	1-570-827-11	SWITCH, SLIDE (SSJ3)(2SP/4SP)
S700	1-554-813-41	SWITCH, KEY BOARD (TAPE)
S701	1-554-813-41	SWITCH, KEY BOARD (SEEK AMS +)
S702	1-554-813-41	SWITCH, KEY BOARD (INTOR/1)
S703	1-554-813-41	SWITCH, KEY BOARD (SHUF/5)
S704	1-554-813-41	SWITCH, KEY BOARD (SELECT)
S705	1-554-813-41	SWITCH, KEY BOARD (M.SCAN/A.MEM)
S710	1-554-813-41	SWITCH, KEY BOARD (FM/MW/SW)
S711	1-554-813-41	SWITCH, KEY BOARD (SEEK AMS -)
S712	1-554-813-41	SWITCH, KEY BOARD (REPEAT/2)
S713	1-554-813-41	SWITCH, KEY BOARD (ATA/6)
S714	1-571-938-21	SWITCH, KEY BOARD (DSPL)
S715	1-571-938-21	SWITCH, KEY BOARD (METAL/LOUD)
S720	1-554-813-41	SWITCH, KEY BOARD (CD)
S721	1-554-813-41	SWITCH, KEY BOARD (MANU/DISC +)
S722	1-554-813-41	SWITCH, KEY BOARD (BL.SKIP/3)
S723	1-554-813-41	SWITCH, KEY BOARD (SELECT +)
S724	1-554-813-41	SWITCH, KEY BOARD (SDK)
S725	1-571-938-21	SWITCH, KEY BOARD (DOLBY/LOCAL)
S730	1-554-813-41	SWITCH, KEY BOARD (EJECT)
S731	1-554-813-41	SWITCH, KEY BOARD (MANU/DISC -)
S732	1-554-813-41	SWITCH, KEY BOARD (D.SCAN/4)
S733	1-554-813-41	SWITCH, KEY BOARD (SELECT -)
S734	1-554-813-41	SWITCH, KEY BOARD (OFF)
S735	1-571-938-21	SWITCH, KEY BOARD (MONO)
S740	1-554-813-41	SWITCH, KEY BOARD (RESET)
S901	1-570-771-11	SWITCH (POWER)
X1	1-567-250-11	OSCILLATOR, CERAMIC
X2	1-567-848-11	VIBRATOR, CRYSTAL (2.2MHz)
X501	1-567-821-11	VIBRATOR, CRYSTAL (4.19MHz)

ACCESSORY & PACKING MATERIAL

3-336-617-01	BAG, PROTECTION
*3-357-034-01	INDIVIDUAL CARTON
*3-349-488-01	CUSHION (UPPER)
*3-349-489-01	CUSHION (LOWER)
3-750-879-61	MANUAL, FITTING/CONNECTION
3-750-878-61	MANUAL, INSTRUCTION

MOUNTING HARDWARE

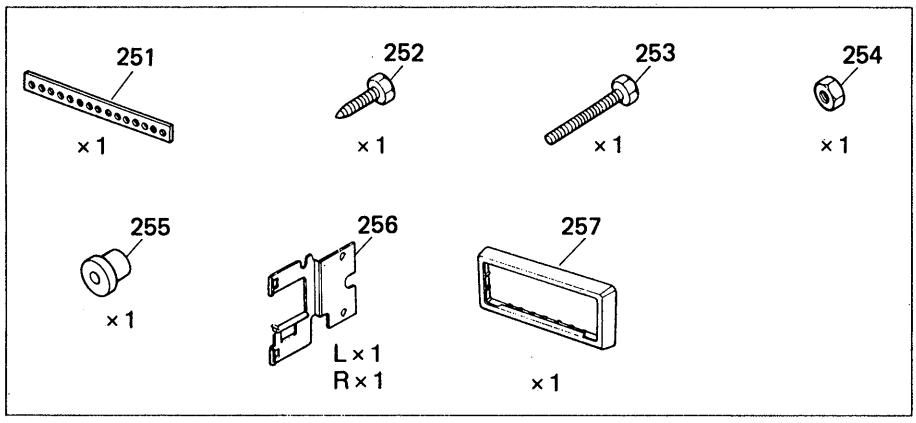

No.	Part No.	Description	Remarks
251	3-310-655-01	SUPPORT (ND), FITTING	
252	3-302-126-01	SCREW, TAPPING (DIA. 5X20)	
253	7-682-583-04	SCREW +P 5X40	
254	7-684-025-04	N 5, TYPE 2	
255	3-349-410-01	BUSHING	
256-L	*3-349-456-01	BRACKET (FIX, LEFT)	
256-R	*3-349-457-01	BRACKET (FIX, RIGHT)	
257	*3-349-458-01	FRAME, ORNAMENTAL	

9-955-671-11

Sony Corporation
Mobile Electronics Group

English
90A05075-1
Printed in Japan
© 1990. 1

Published by Customer Relations and Service Group